


Parts Book


**Conway 48' New and
Refurb City Semis**

**CTS 45, 48, & 53' TRAILERS WITH SPRING
AIR LINE ROUTING
700M034 / 2007**

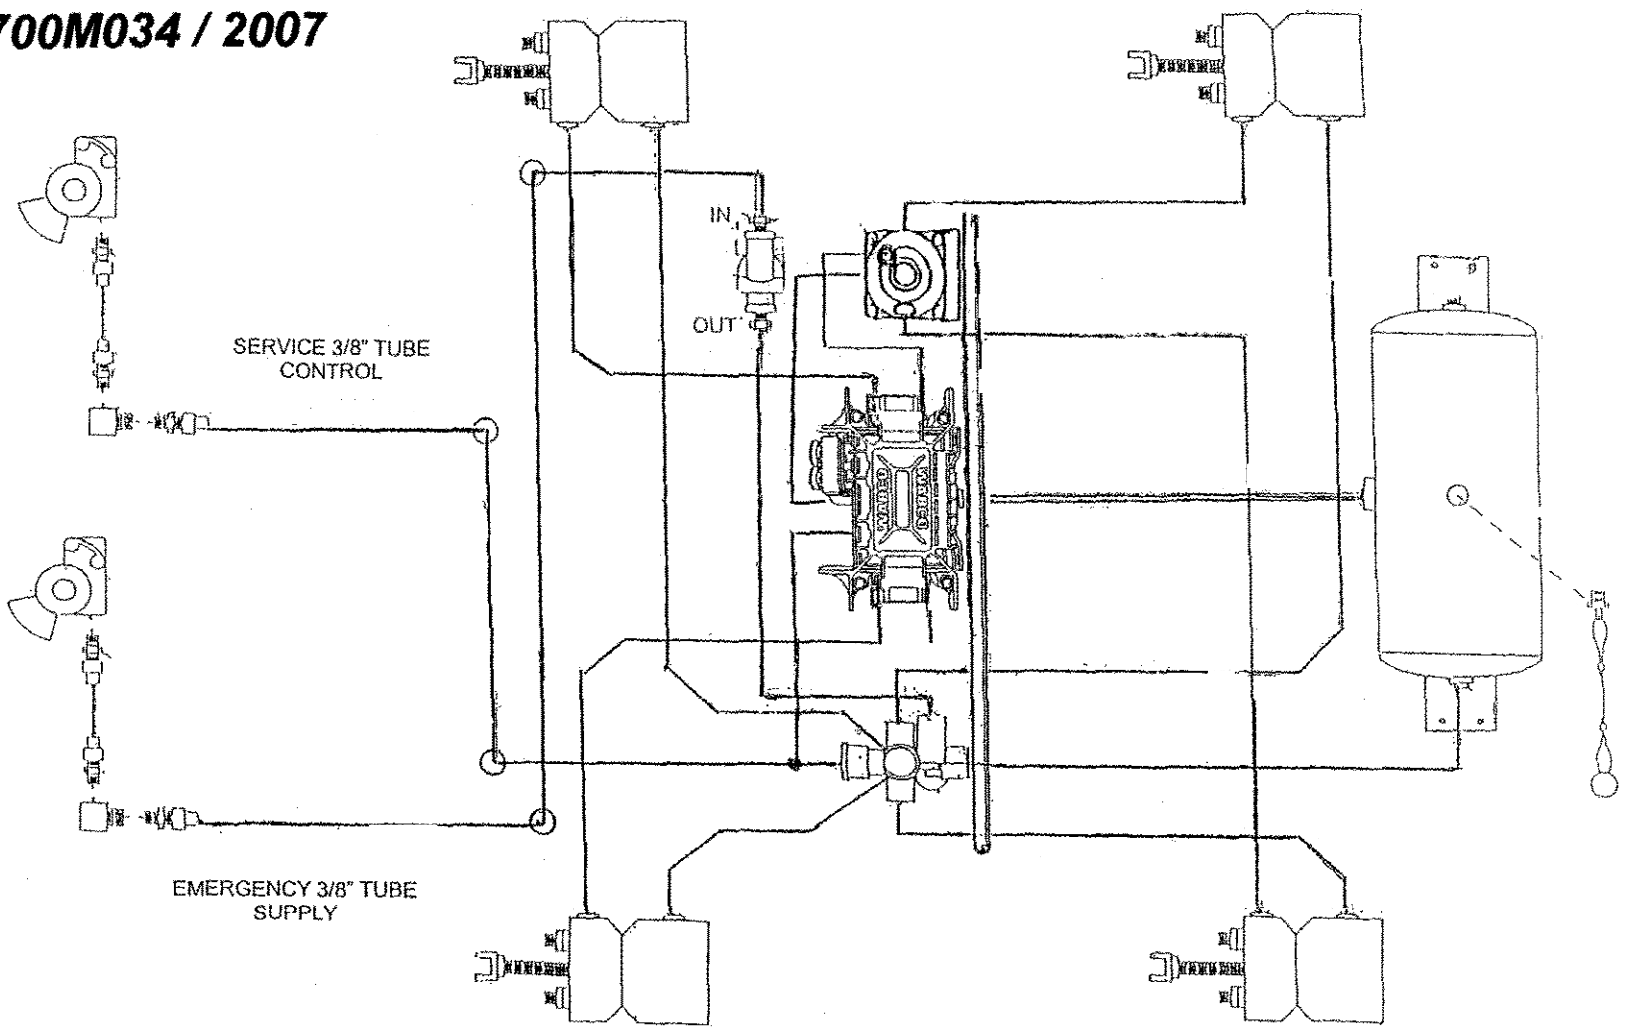


AIR VALVE AND AIR TANK MOUNTING ANGLE LOCATIONS

2104555 (1)
2"x 2" x 40"
AIR PLATE MOUNTING ANGLE

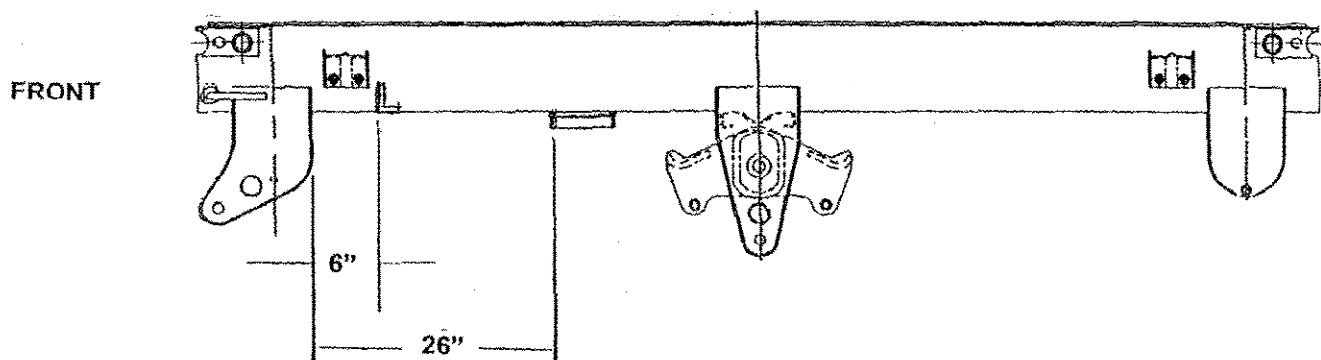



2204501 (2)
AIR TANK MOUNTING BRACKET

GLADHANDS AND FITTINGS – FORWARD WALL / FLUSH MOUNT

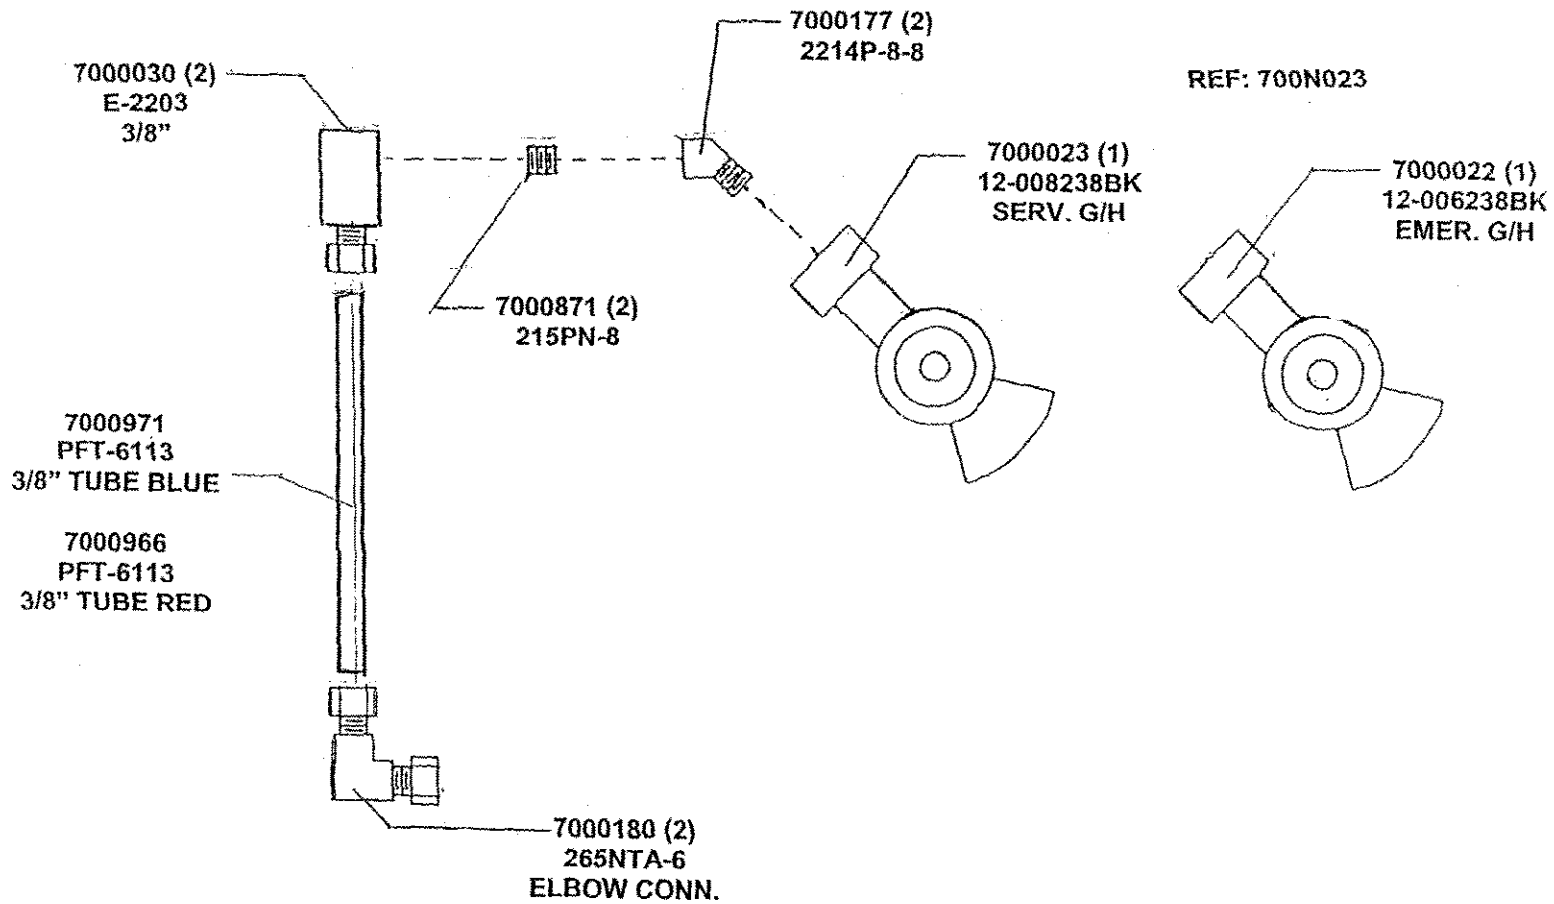


ANCHOR CONNECTOR ASSEMBLY

7000172 (2)
207ACBH-8

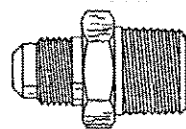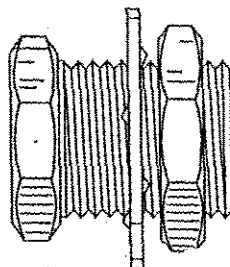


7000151 (2)
48F-8-8



700144 (2)
68NTA-6-8

2104528 (1)
MOUNTING PLATE




REF: 700N049

ADAPTOR -NYLON HOSE TO AIR BRAKE SLIDER HOSE

7700533 (1)
1" x 2" x 18"
HOSE HANGER TUBE



REF: 210N102

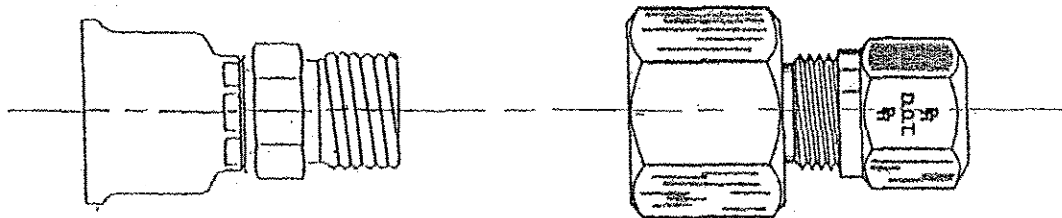


7000173 (2)
10126-6-8

7000142 (2)
68NTA-6-6


REF: 700N053

SLIDER HOSE TO BOGIE AIR LINE HOLDER ASSEMBLY

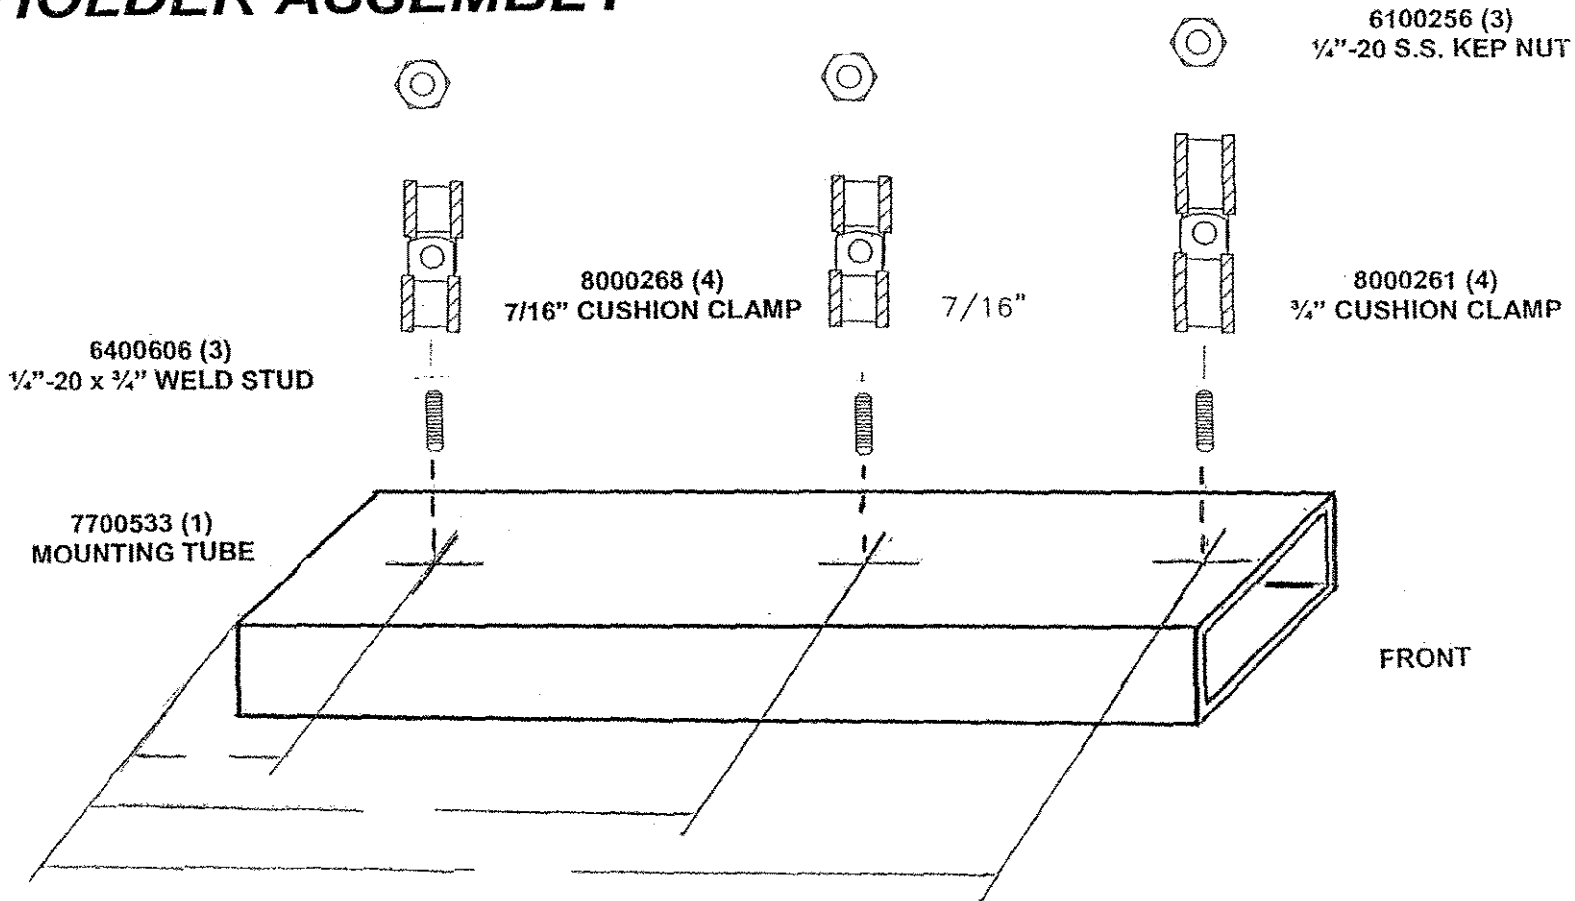


REF: 210N102

AIR BRAKE VALVE MOUNTING PLATE



2104555 (1)
2" x 2" x 40"
ANGLE, PLATE MOUNT

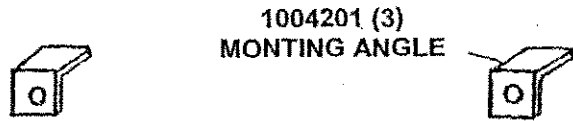


1004201 (3)
MONTING ANGLE



6000375 (3)
BOLT 3/8-16 x 1 1/4"

6100377 (3)
NUT 3/8"-16


6200378 (3)
FLAT WASHER
3/8"

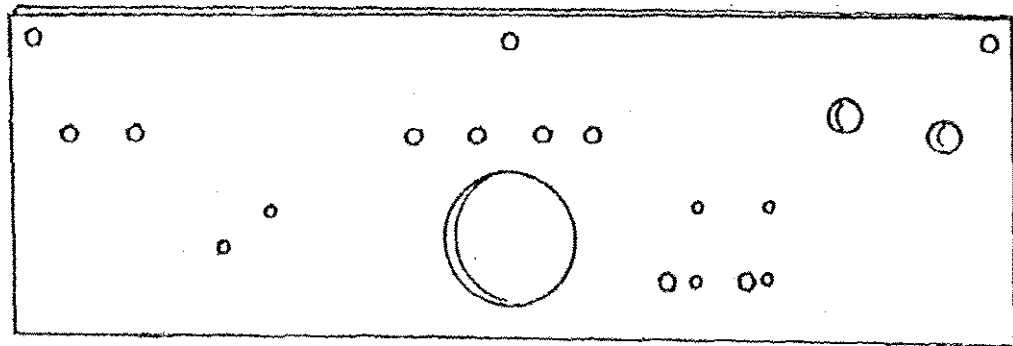

7000000 (1)
AIR VALVE PLATE

AIR FILTER ASSEMBLY

7000110 (1)
2550 SEALCO
AIR FILTER

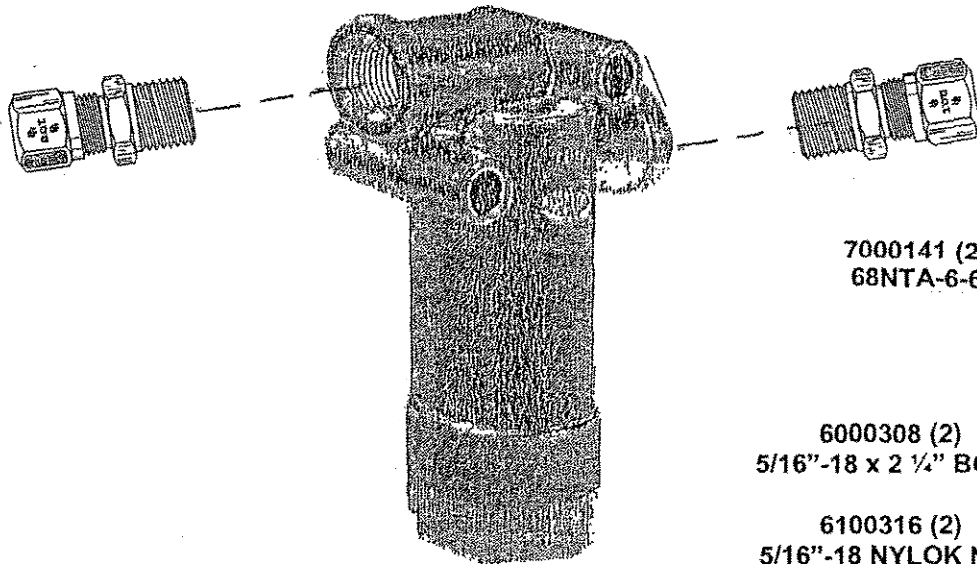


7000141 (2)
68NTA-6-6


6000308 (2)
5/16"-18 x 2 1/4" BOLT

6100316 (2)
5/16"-18 NYLOK NUT


**CTS 45', 48", 53' NEW TRAILER
AIR TANK MOUNTING BRACKET ASSEMBLY**

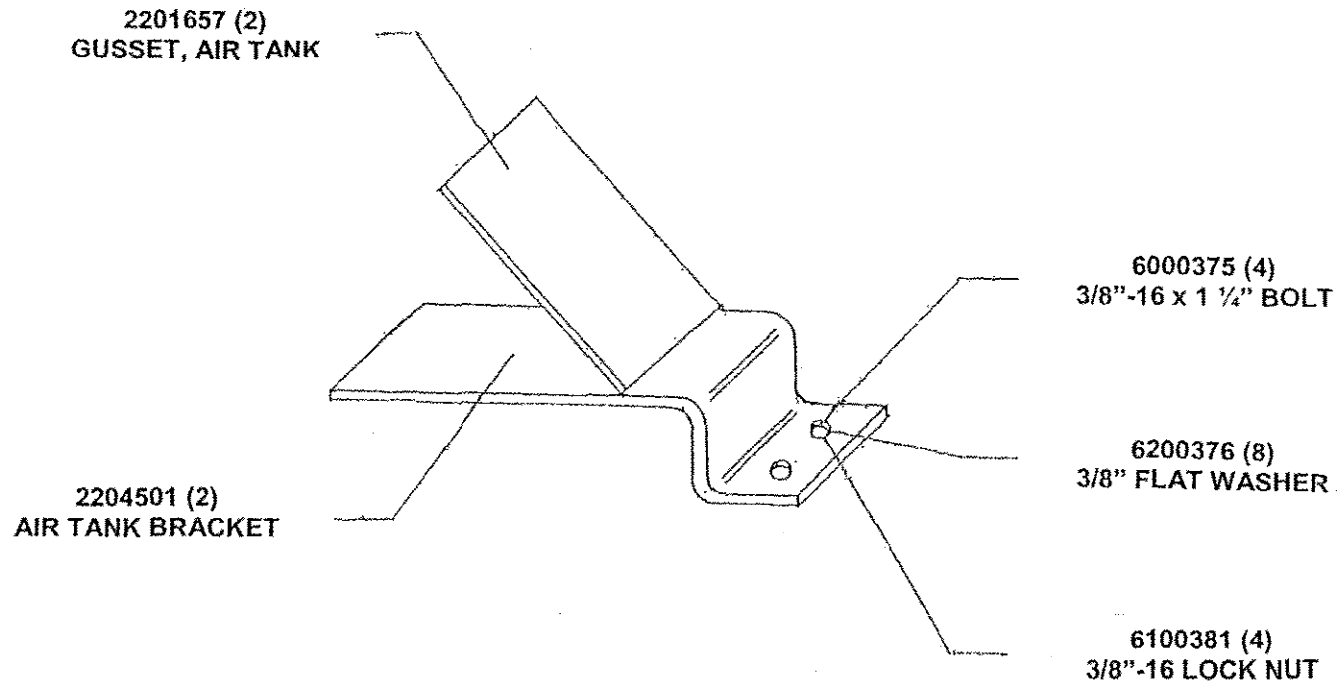

CTS 45', 48", 53' NEW TRAILER AIR TANK ASSEMBLY

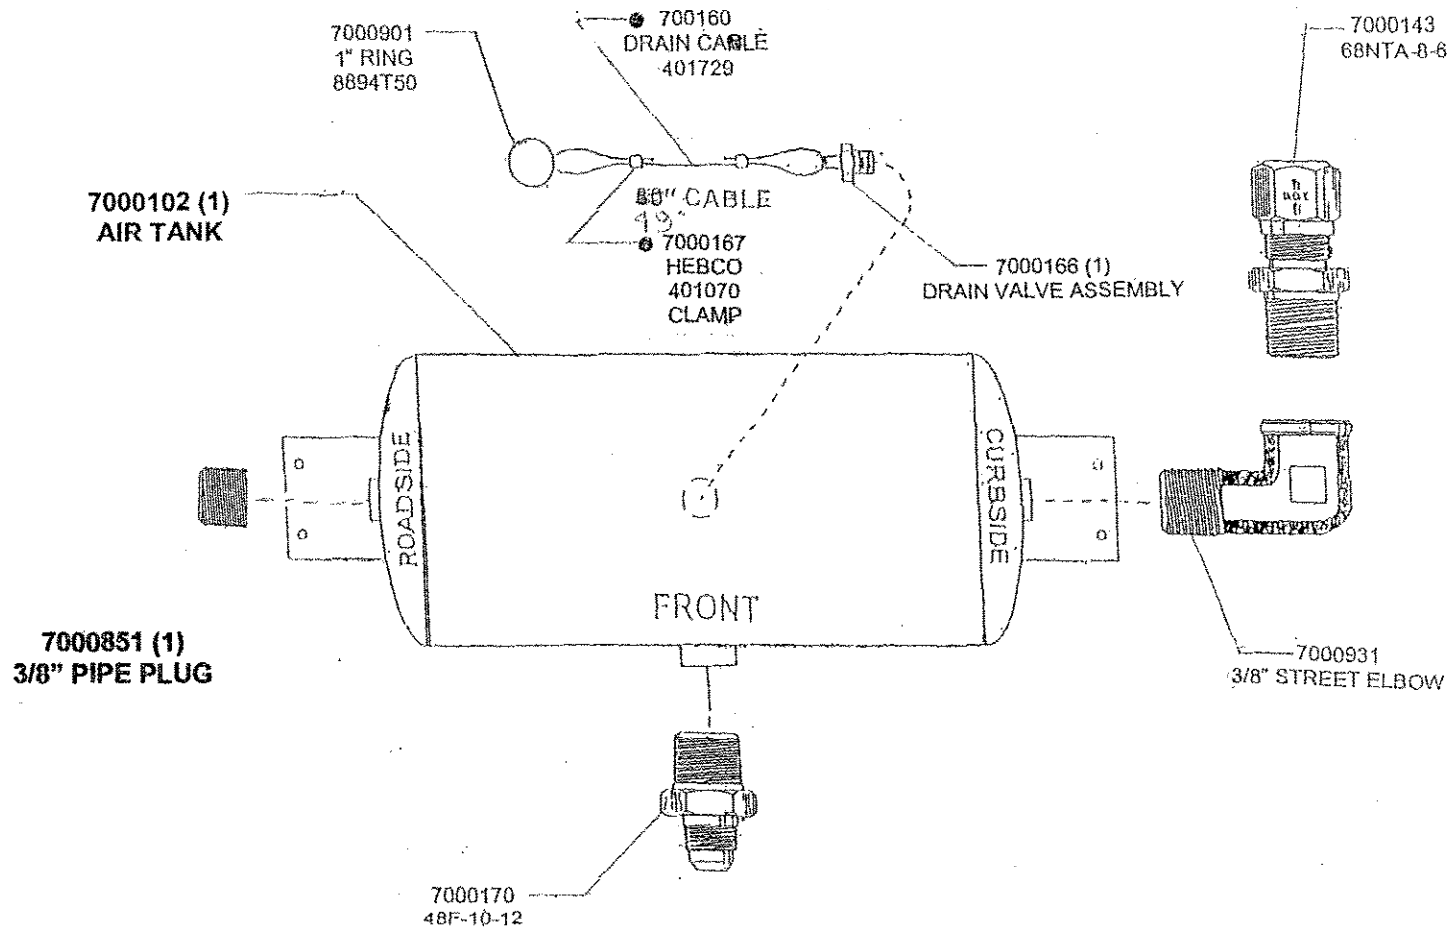


SPRING BRAKE VALVE ASSEMBLY

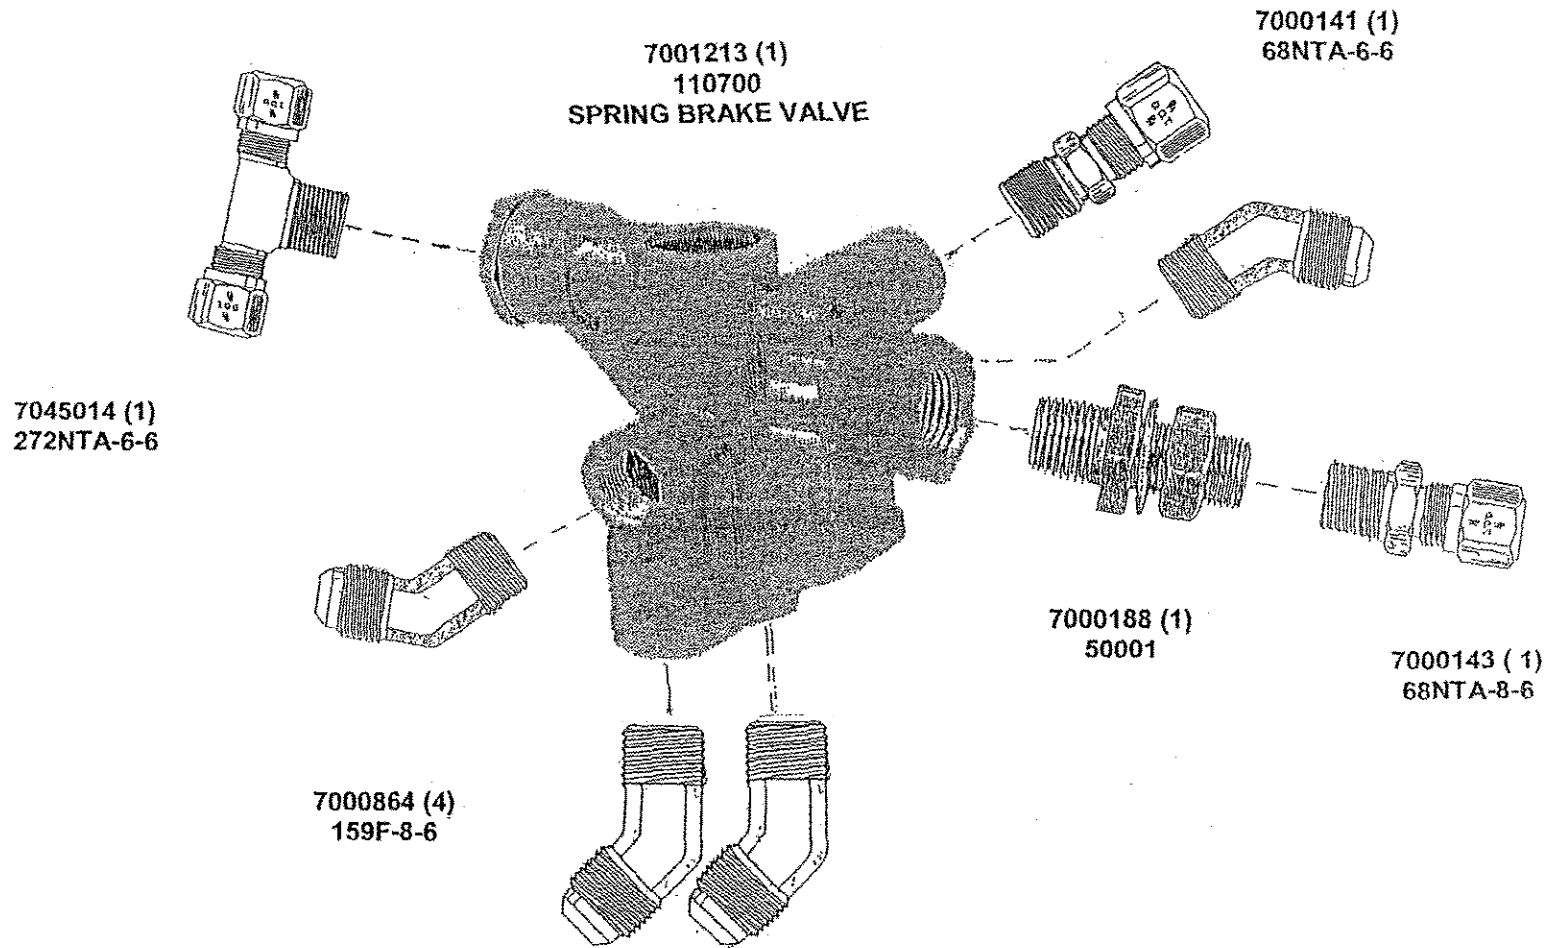


REF: 700N057

RELAY VALVE ASSEMBLY

CTS 45, 48, & 53' TRAILERS WITH SPRING SUSPENSION



7045009 (1)
PARKER
269NTA-8-6

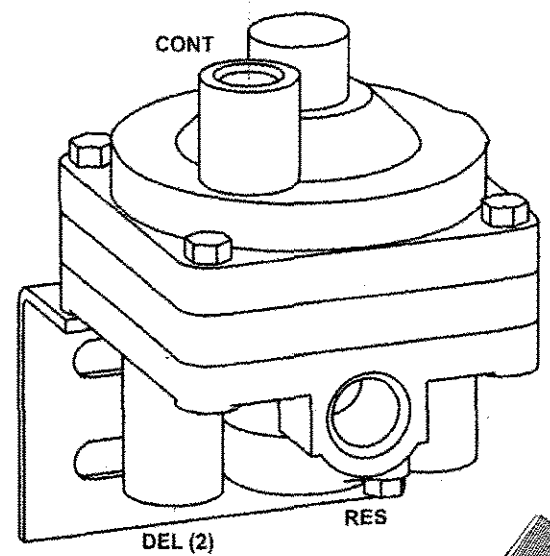


7001247 (1)
SEALCO 110412
RELAY VALE

6000378 (2)
BOLT
3/8"-16 x 1"



6100377 (2)
LOCKNUT
3/8"-16

6200378 (2)
FLAT WASHER
3/8" SAE

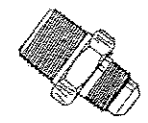

7000170 (1)
PARKER
48F-10-12

7000154 (2)
PARKER
48F-10-6



WABCO ABS VALVE ASSEMBLY CTS 45, 48, & 53' TRAILERS WITH SPRING SUSPENSION

7001229 (1)
MERITOR ABS VALVE
S4005001010


7001218 (2)
SENSOR W/SOCKET
MERITOR 441-032-8080

7001223 (2)
SENSOR WIRE 72"
MERITOR 449-713-0180

7001224 (2)
SENSOR CLIP
MERITOR 899-759-8154

7001230 (1)
POWER CABLE
MERITOR S 4493260600

7045008 (1)
PARKER
269NTA-6-6

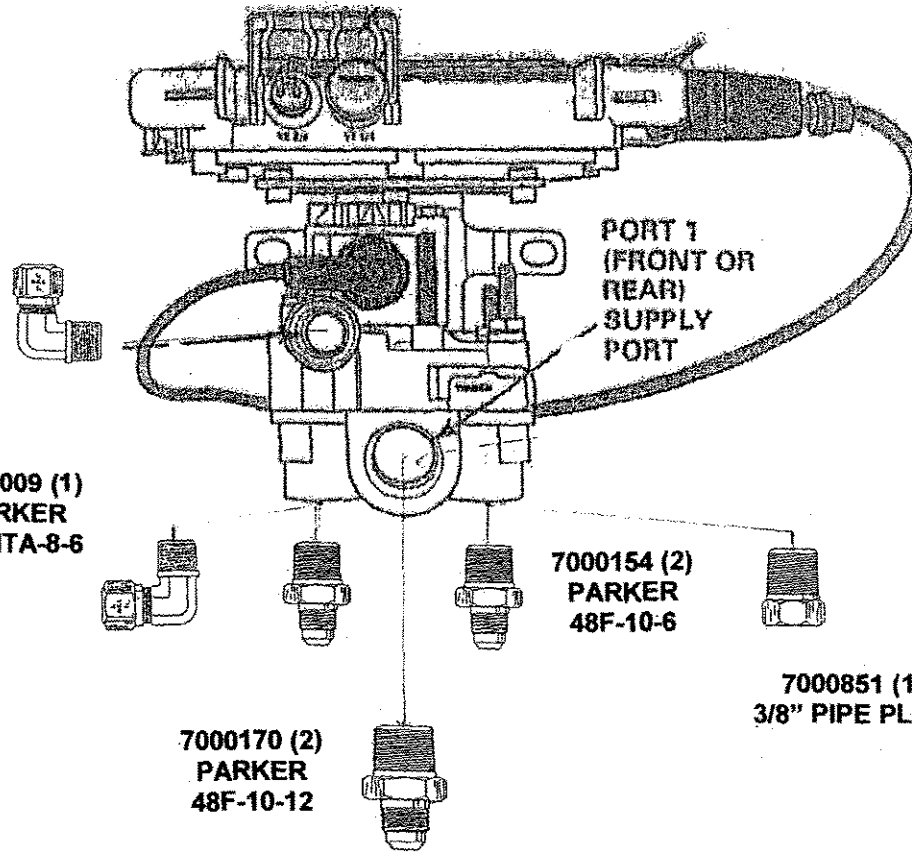

6000375 (2)
BOLT
3/8"-16 x 1 1/4"

6100377 (2)
LOCKNUT
3/8"-16

6200378 (2)
FLAT WASHER
3/8" SAE

7045009 (1)
PARKER
269NTA-8-6

7000154 (2)
PARKER
48F-10-6

7000851 (1)
3/8" PIPE PLUG

7000170 (2)
PARKER
48F-10-12

700N233


AIR BRAKE CHAMBER ASSEMBLY

SERVICE

EMERGENCY

7000203
PARKER
159F-10-6

7000864
PARKER
159F-8-8

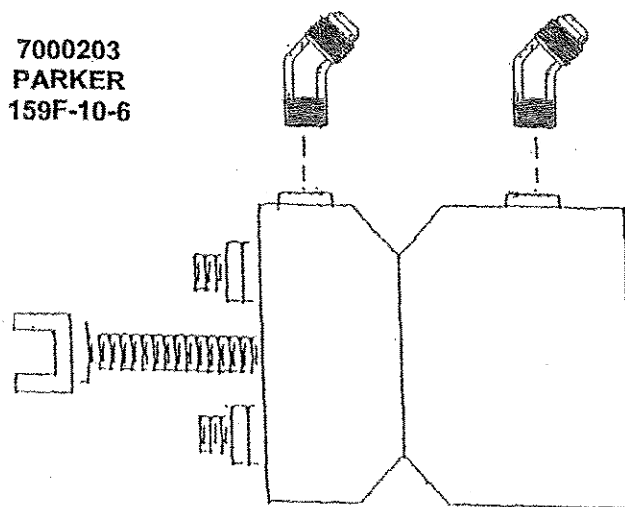


2200199
ANCHORLOK
166101

AIR BRAKE HOSE COMPONENTS

7000001
PARKER
16826-8-8

7000116
PARKER
293-8


7000173
PARKER
10126-6-8



7000001
PARKER
16826-8-8


7000116
PARKER
293-8

7000142
PARKER
68NTA-6-6



EMERGENCY

SERVICE




7000002
PARKER
16826-10-10


7000117
PARKER
293-10

7000002
PARKER
16826-10-10

AIR BRAKE HOSE ROUTING

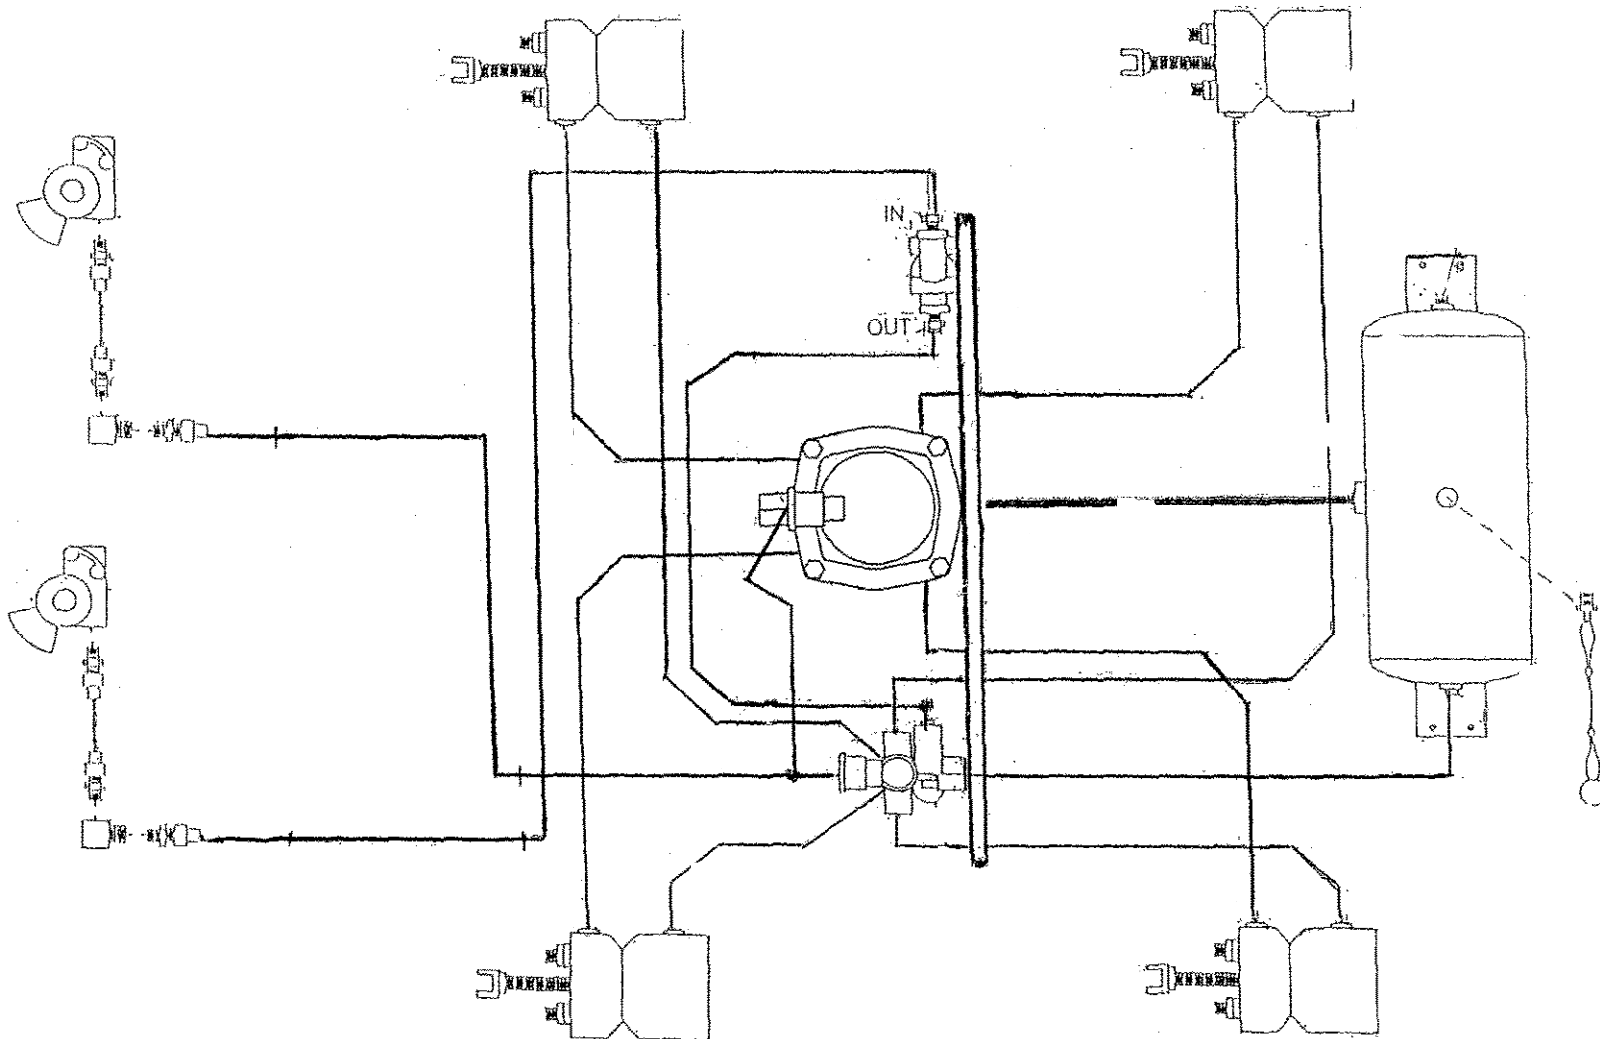


AIR BRAKE VALVE MOUNTING PLATE

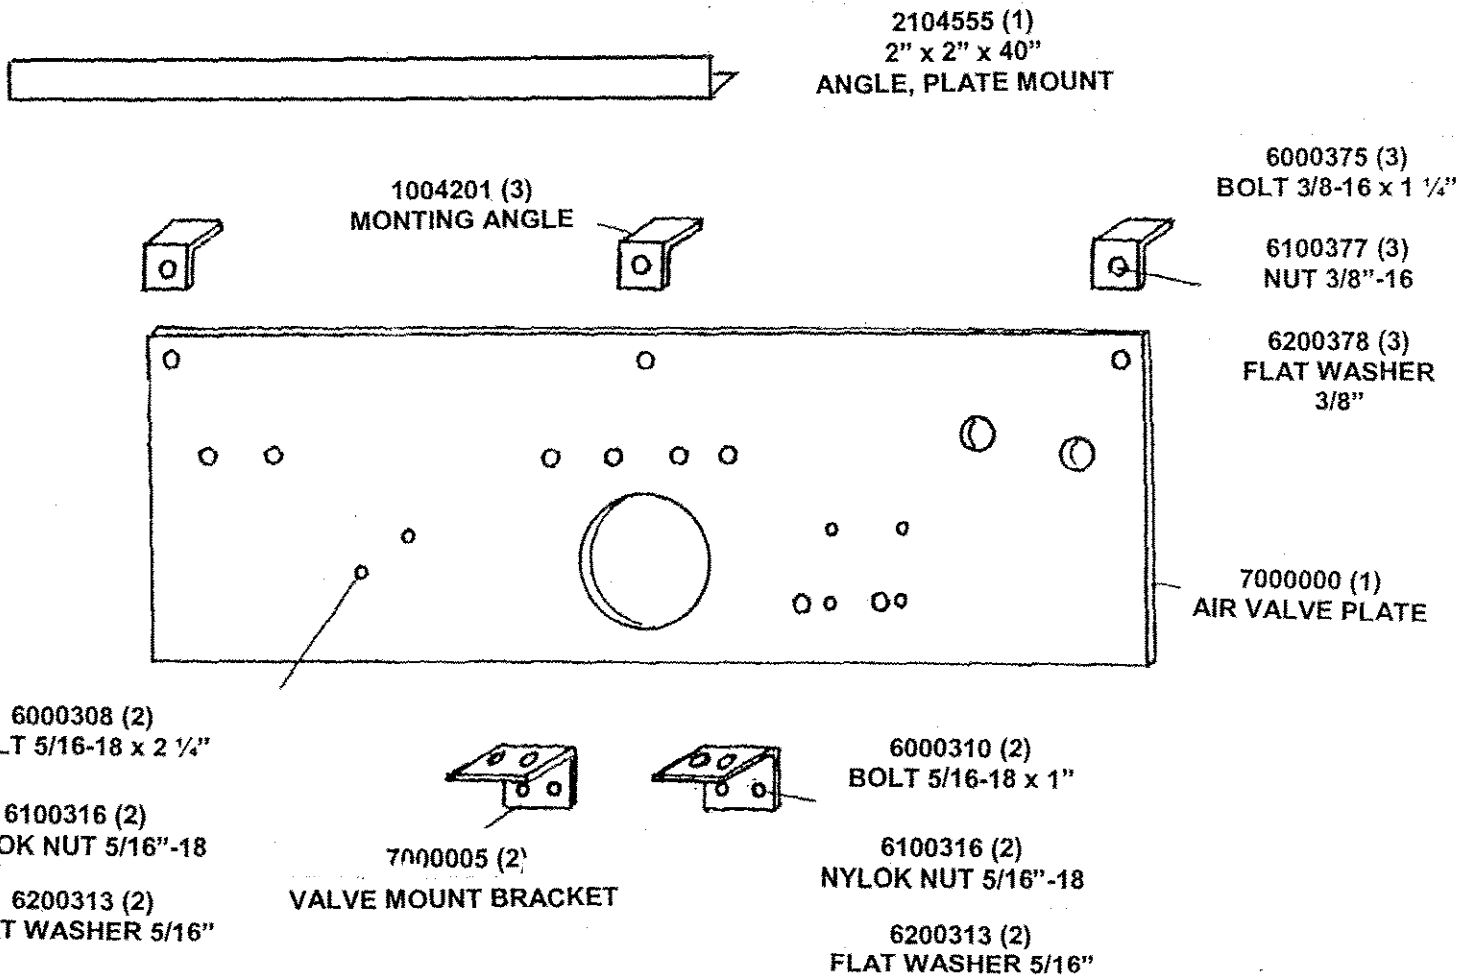

REF: 700N054











SERVICE RELAY VALVE ASSEMBLY

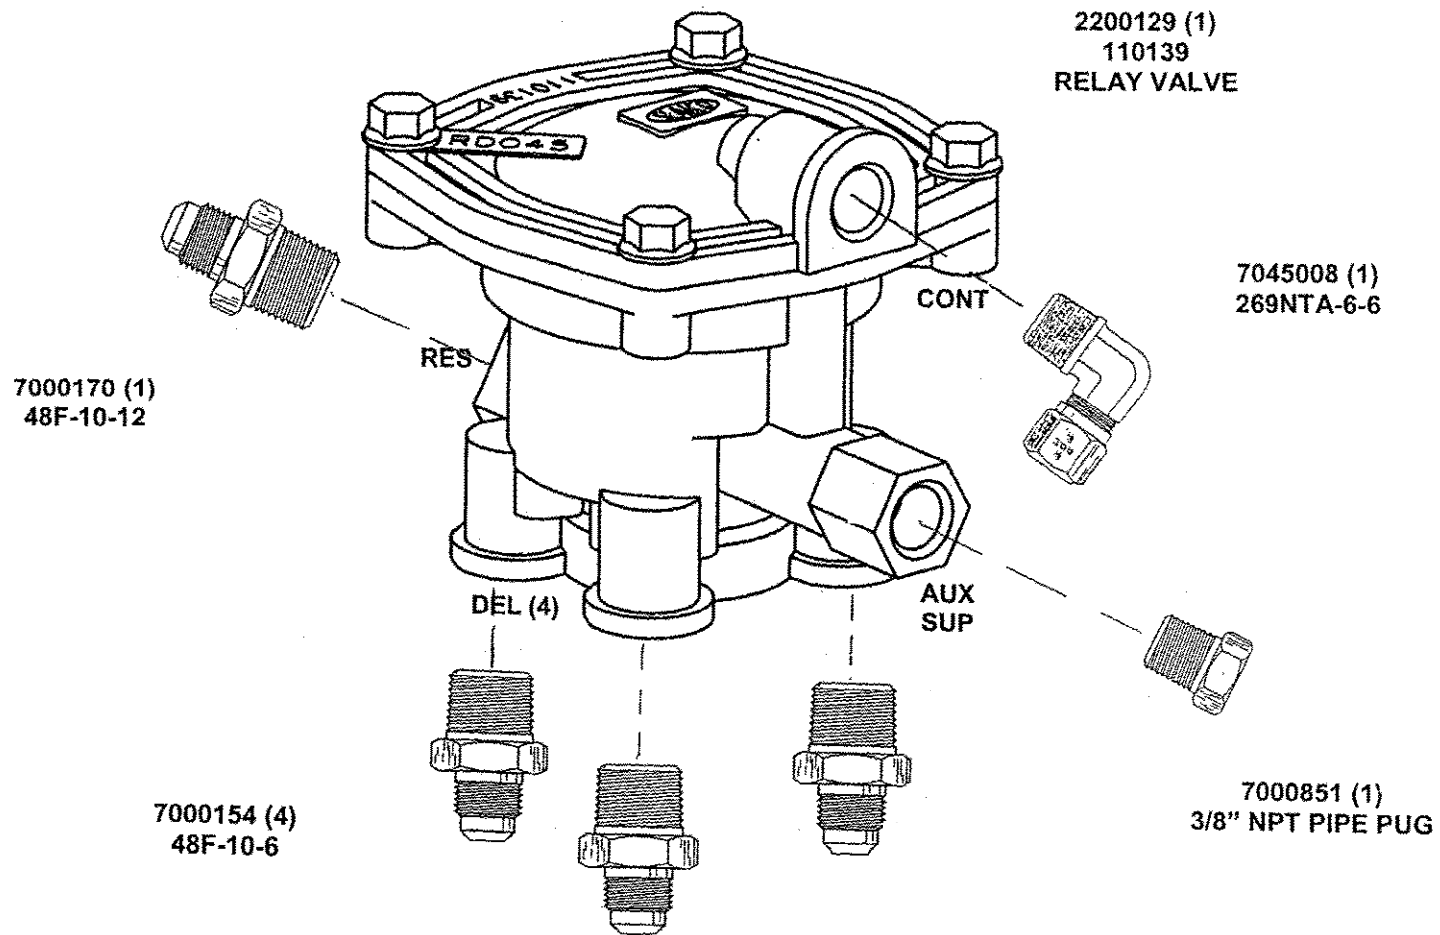

REF: 700N058


AXLE & WHEEL END ASSEMBLY – 220M030

CTS SEMI TRAILER – 2007

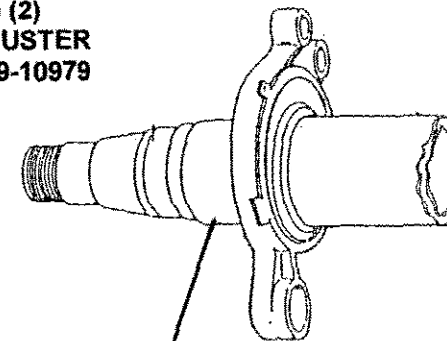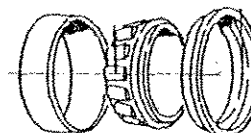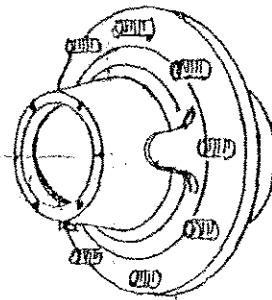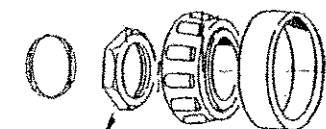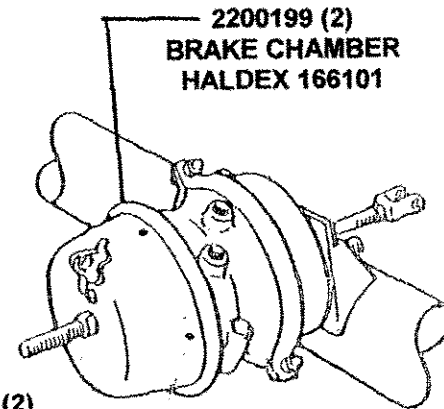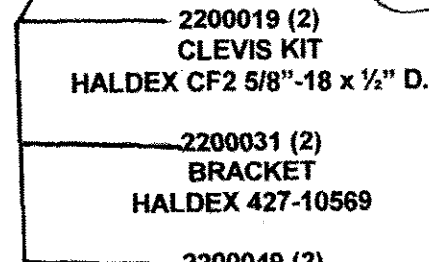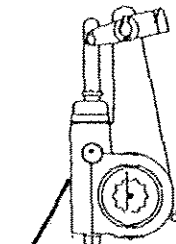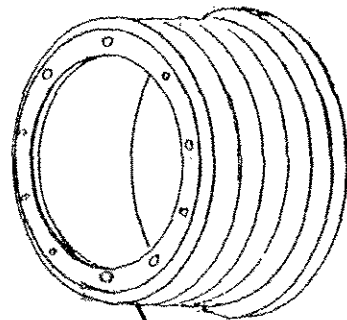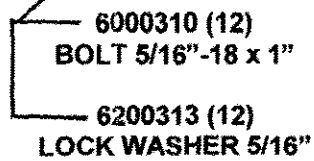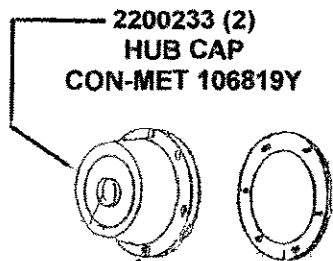

BOGIE SUB FRAME DETAILS

(330TB11 – COMPLETE SUBFRAME)

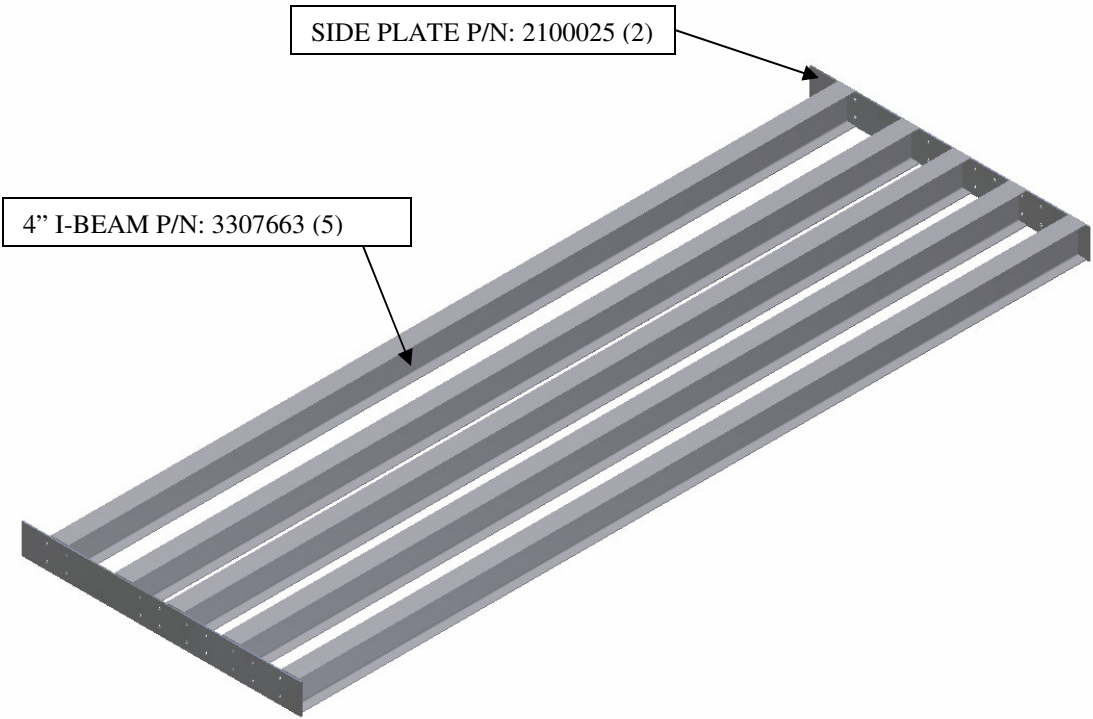


SIDE PLATE P/N: 2100025 (2)

4" I-BEAM P/N: 3307663 (5)




ANCHOR COUPLER MOUNTING ANGLE
P/N: 2104528 (1)
LOCATED ON ROADSIDE –
WELDED TO FIRST I-BEAM IN FRONT OF
SLIDER SUSPENSION RAILS
(FOR MOUNTING AIRLINE HOSES)

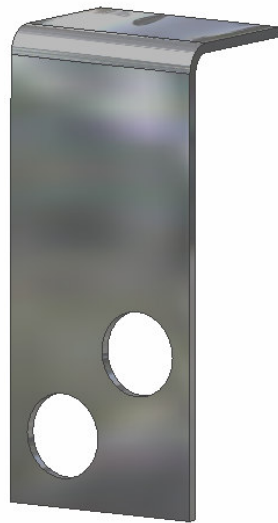

BUMPER ASSEMBLY

CONWAY CITY SEMIS

COMPLETE ASSEMBLY P/N: 210N101

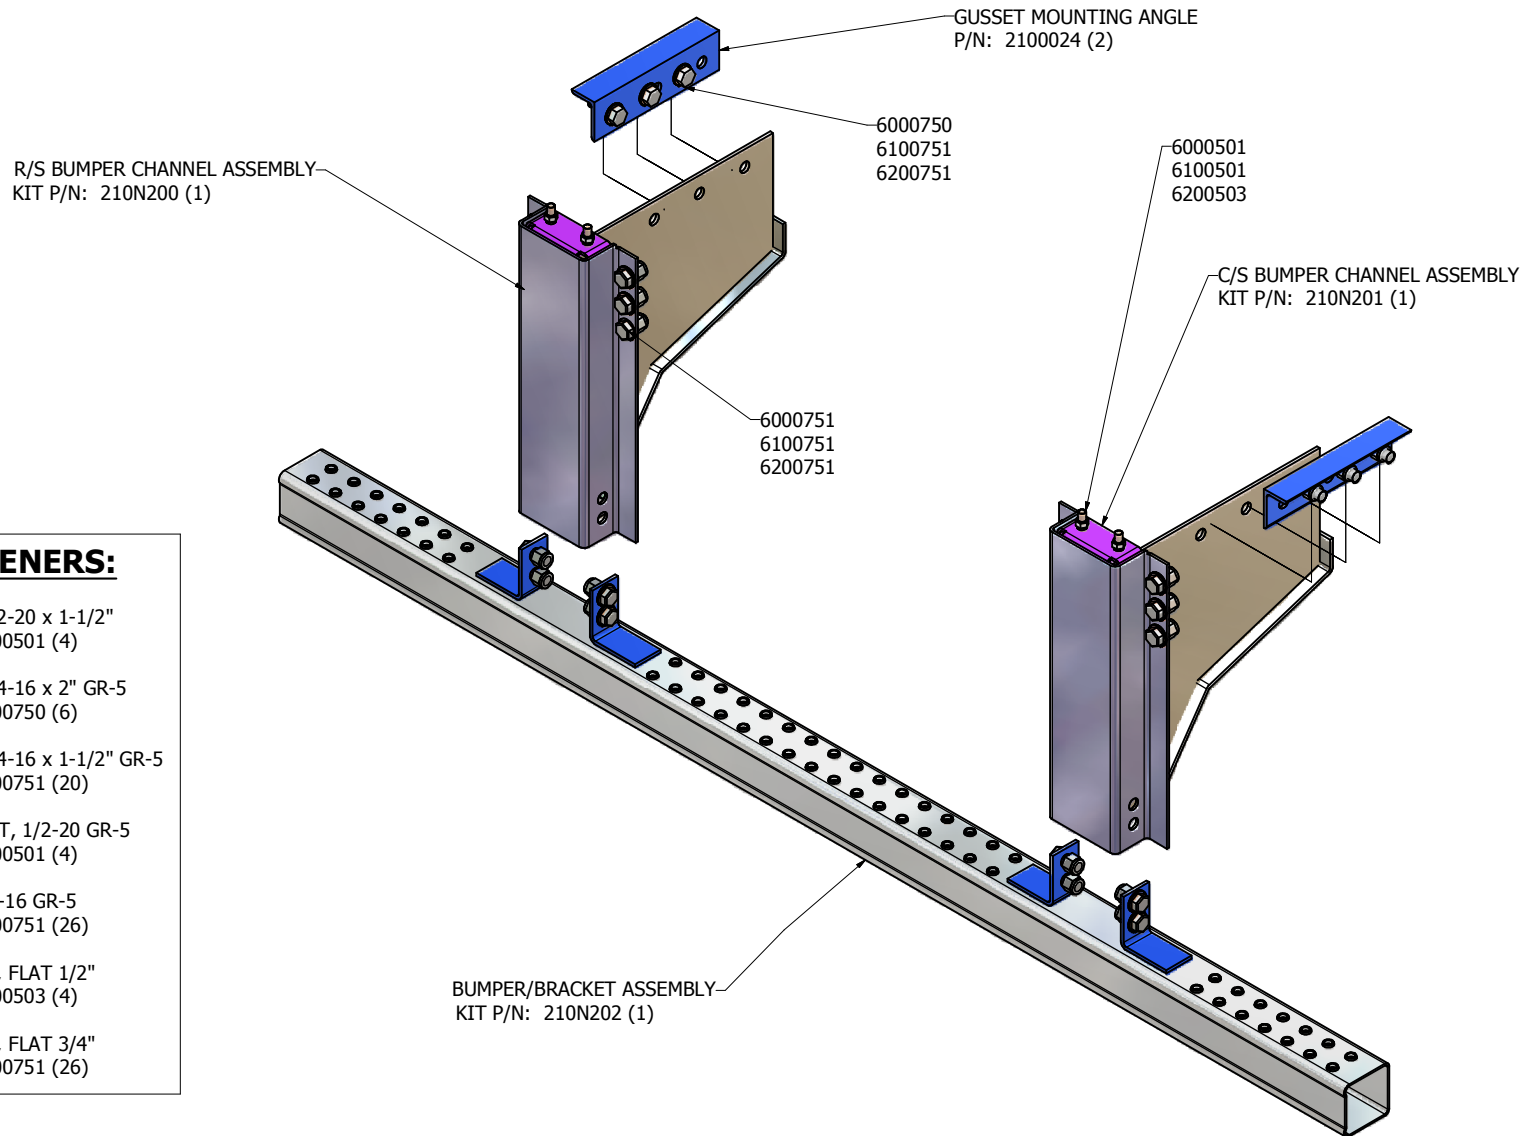

FASTENERS:

BOLT, 1/2-20 x 1-1/2"
P/N: 6000501 (4)

BOLT, 3/4-16 x 2" GR-5
P/N: 6000750 (6)

BOLT, 3/4-16 x 1-1/2" GR-5
P/N: 6000751 (20)

LOCK NUT, 1/2-20 GR-5
P/N: 6100501 (4)


NUT, 3/4-16 GR-5
P/N: 6100751 (26)

WASHER, FLAT 1/2"
P/N: 6200503 (4)



WASHER, FLAT 3/4"
P/N: 6200751 (26)

Con-way 45'-53' Freight Die-Cut (Kit #CONWA31803)


Large Stripe Section

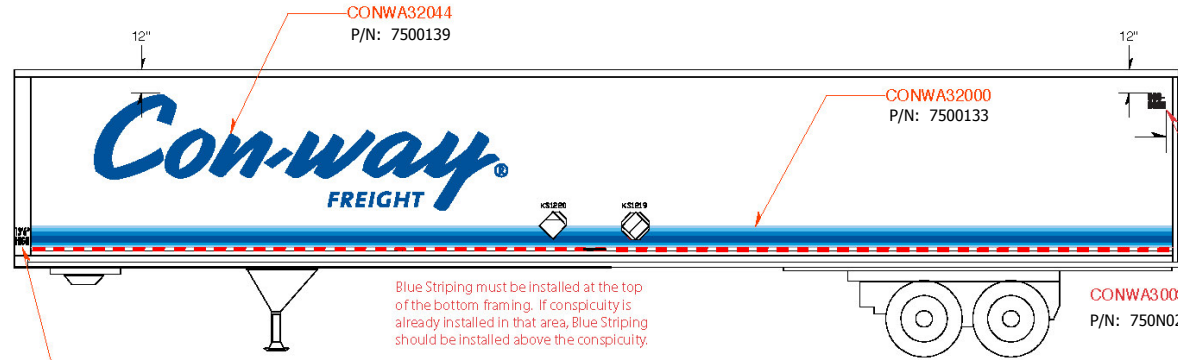

Blue Striping must be installed at the top of the bottom framing. If conspicuity is already installed in that area, Blue Striping should be installed above the conspicuity.

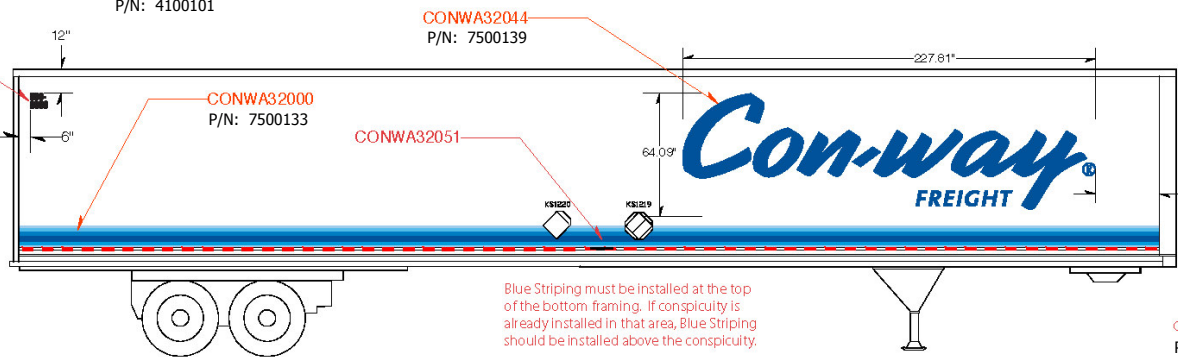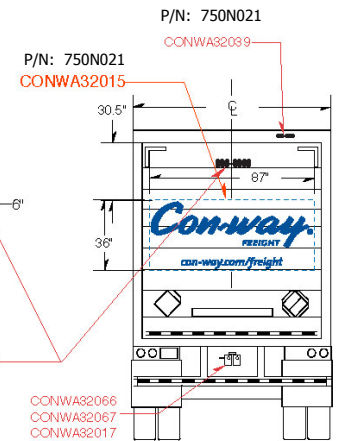

Blue Striping must be installed at the top of the bottom framing. If conspicuity is already installed in that area, Blue Striping should be installed above the conspicuity.

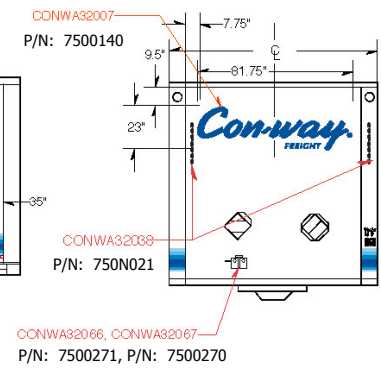

Paint Color Match

White Elite SS N0006EA - Cab Body, Roof Fairings, Etc.
Accuride White Powder Coat - Wheel Rims
Black, High Solids Polyurethane - Chassis and Accessories

Notes:

CONWA32044 - (2) 68" x 247" Rect Freight CS/RS - To be installed 35" from the front of the trailer and 12" down from the top.

CONWA32007 - (1) 23" x 80" Die-Cut Freight Logo Front - To be installed 9.5" down from the top frame and centered vertically.

CONWA32015 - (1) 36" x 87" Rect. Logo Freight/Web Reflective - To be installed centered vertically on the rear door and down 30.5" from the top frame.

CONWA32000 - (108) 12" x 1" Rolls of 5 Color Multi Stripe - To be lined up along the bottom of the trailer, above the conspicuity.

CONWA32040 - (1) 13' 6" - To be installed on the front drivers side corner radius of the trailer.

Miscellaneous Decals:

CONWA30017 - (1) 5" x 1" - Pull For Air Tank Drain Decal - Mount decal on the inside edge of the drivers door beneath the Sterling factory specification plate.

CONWA30037 - (3) 6" Black Unit #'s (Level) - Mount on the rear door above the rear logo and on both sides, on the back end.

CONWA30038 - (2) 4" Black Unit #'s (Vertical) - Mount on the front of the trailer, centered vertically on the corner radius.

CONWA30039 - (2) 3" Black Unit #'s (Level) - Mount on the rear on the top frame between the center line and the right side. Also mounted on the inside of the trailer on the back end on the drivers side.

CONWA32066 - (2) Red Glad Hand Decal - Install on trailer front and rear behind glad hands.

CONWA32067 - (2) Blue Glad Hand Decal - Install on trailer front and rear behind glad hands.

CONWA31803 Kit Breakdown


Part #	Description/Size
CONWA32044	(2) D/C Logo Freight (68" x 223" CS/RS)
CONWA32007	(1) D/C Logo Freight (23" x 80" Frt)
CONWA32015	(1) Rect Logo Freight/Web (36" x 87" RefRear)
CONWA32000	(108) 5 Color Multi Stripe (12" x 1" Roll)
CONWA32040	(1) Decal (13' x 6")
CONWA30017	(1) 5" x 1" Pull For Air Tank Drain/Decal
CONWA30013	(1) 2.25" x 3" Equipment Service Due/Decal
CONWA30037	(3) 6" Black Unit #'s (Level) **
CONWA30038	(2) 4" Black Unit #'s (Vertical) **
CONWA30039	(2) 3" Black Unit #'s (Level) **
CONWA32066	(2) Red Glad Hand Decal (5" x 7")
CONWA32067	(2) Blue Glad Hand Decal (5" x 7")

** Please Specify Equipment Numbers When Ordering Kits.

Con-way Freight			
Decal Placement for 45'-53' Die-Cut Trailers			
Date: 4.9.07		Kit #31803	Drawn By: BB
Rev#	Date:	Changes:	
Parts available from: Monographics 5300 Newport Drive Rolling Meadows, IL 60008 (847) 390-3900			


DOOR FRAME ASSEMBLY

CONWAY CITY SEMIS

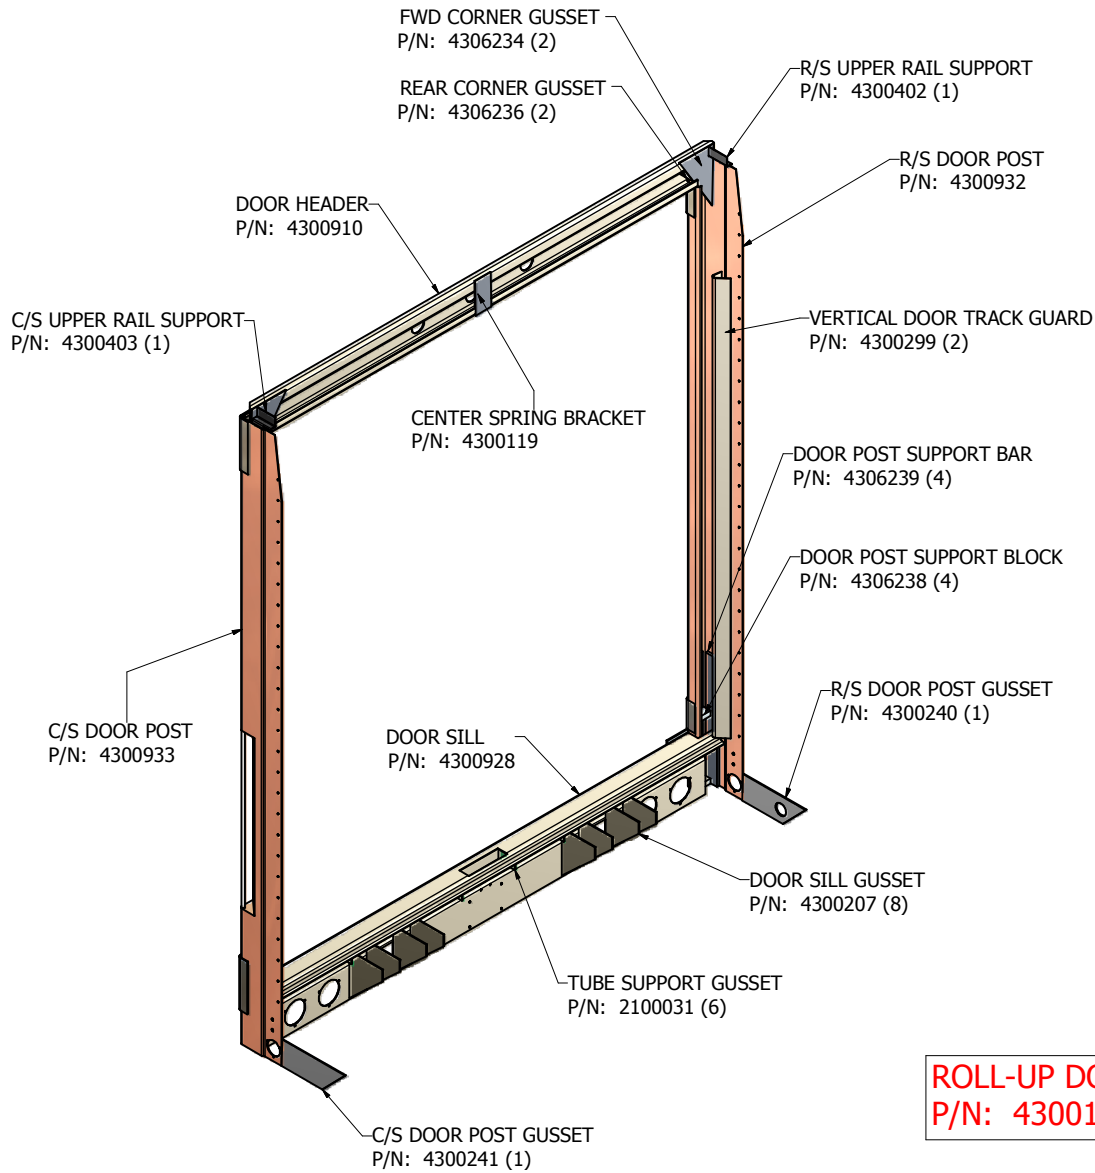



ROLL-UP DOOR
P/N: 4300184

COMPLETE DOOR FRAME
P/N: 430N108

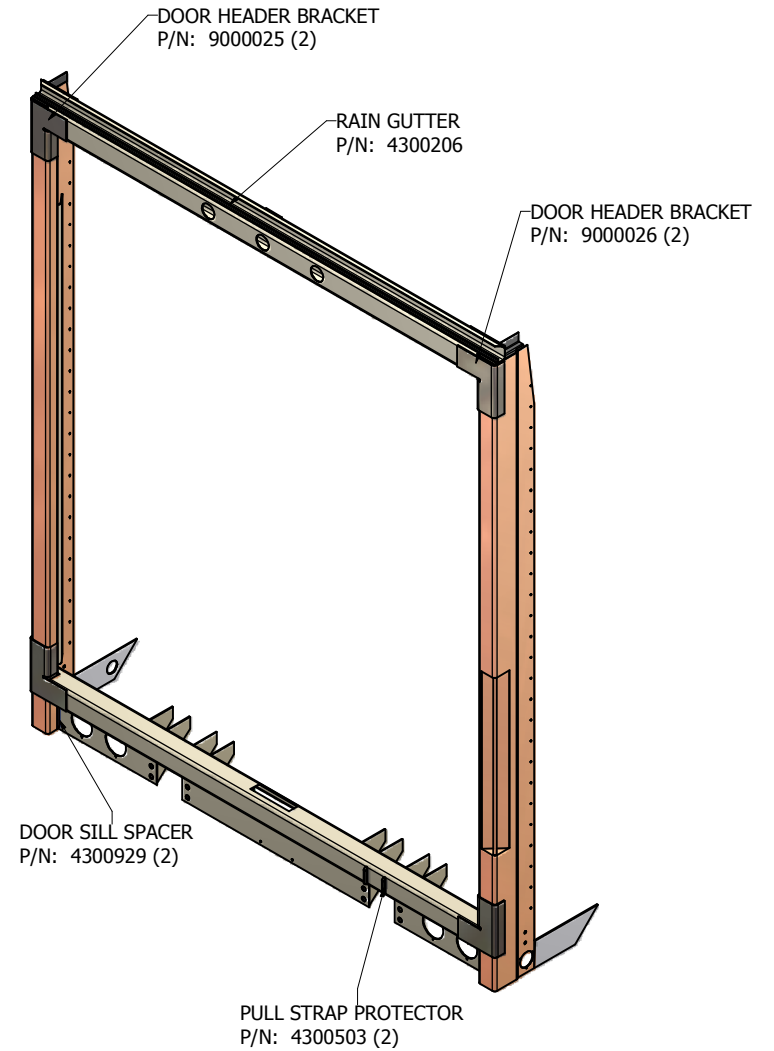


TRAMEC NOSE BOX & 7-WAY SOCKET - 800N110
CTS SEMI TRAILERS

8000941 (1)
TRAMEC NOSE BOX
38260B

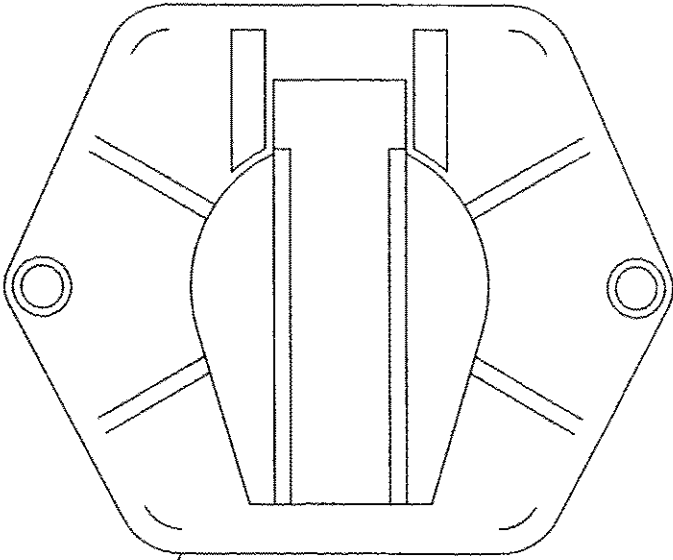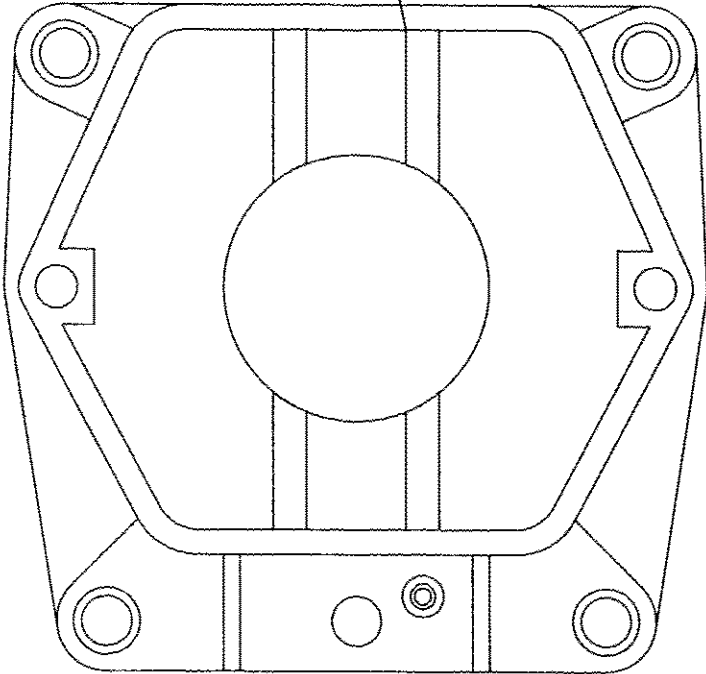


8000942 (1)
TRAMEC 7 WAY
38310

MAIN HARNESS 48' NEW - 8004802
CTS SEMI TRAILERS


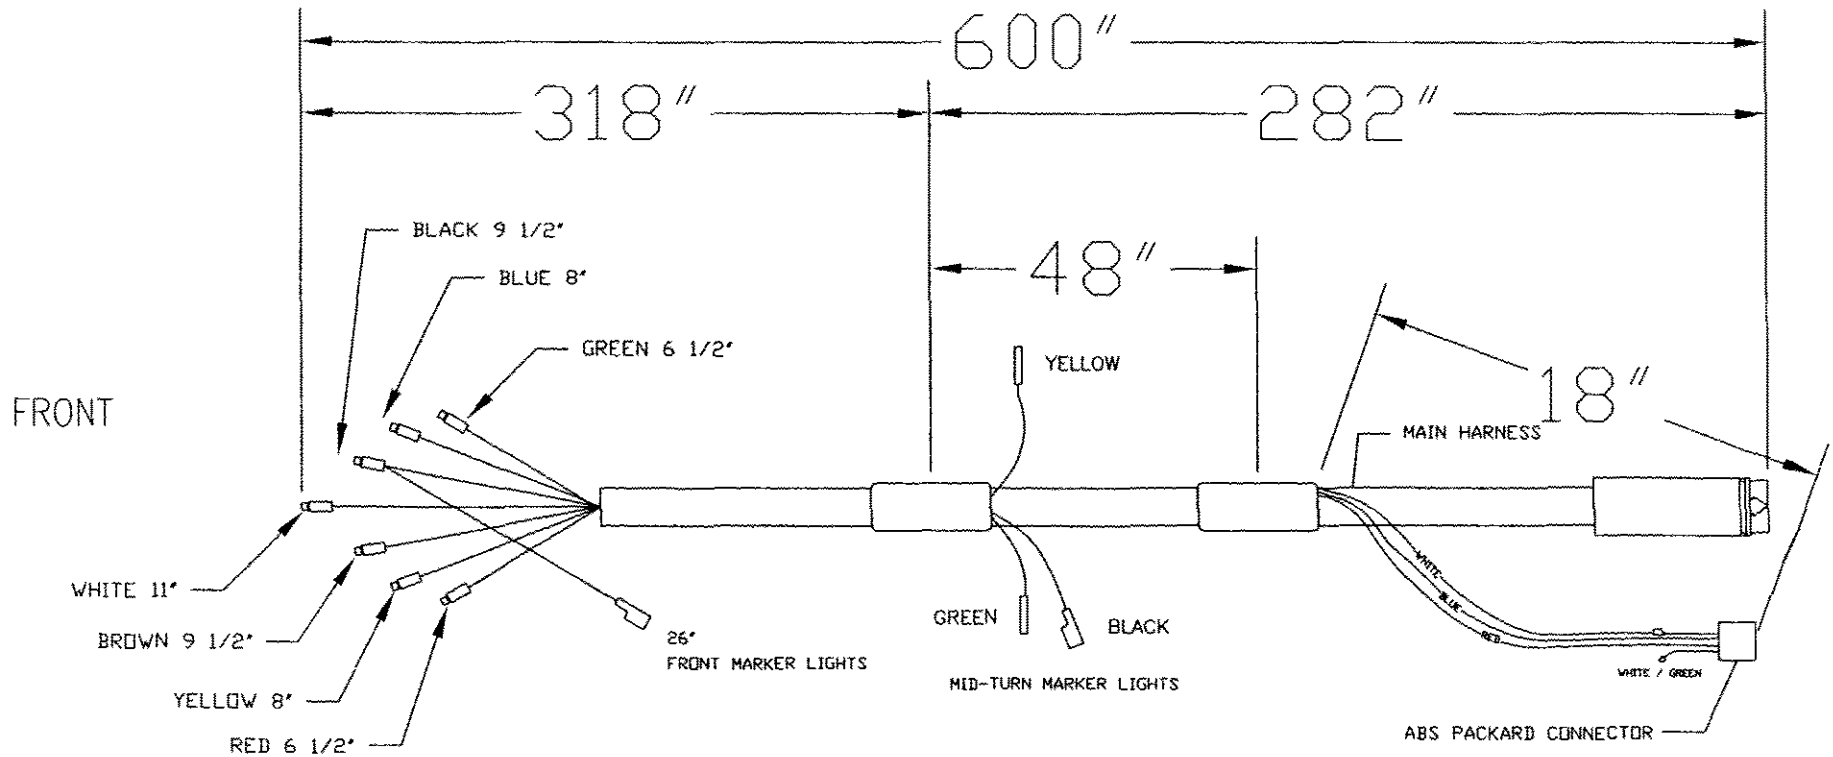


MAIN HARNESS 48' REFURB - 8004802
CTS SEMI TRAILERS

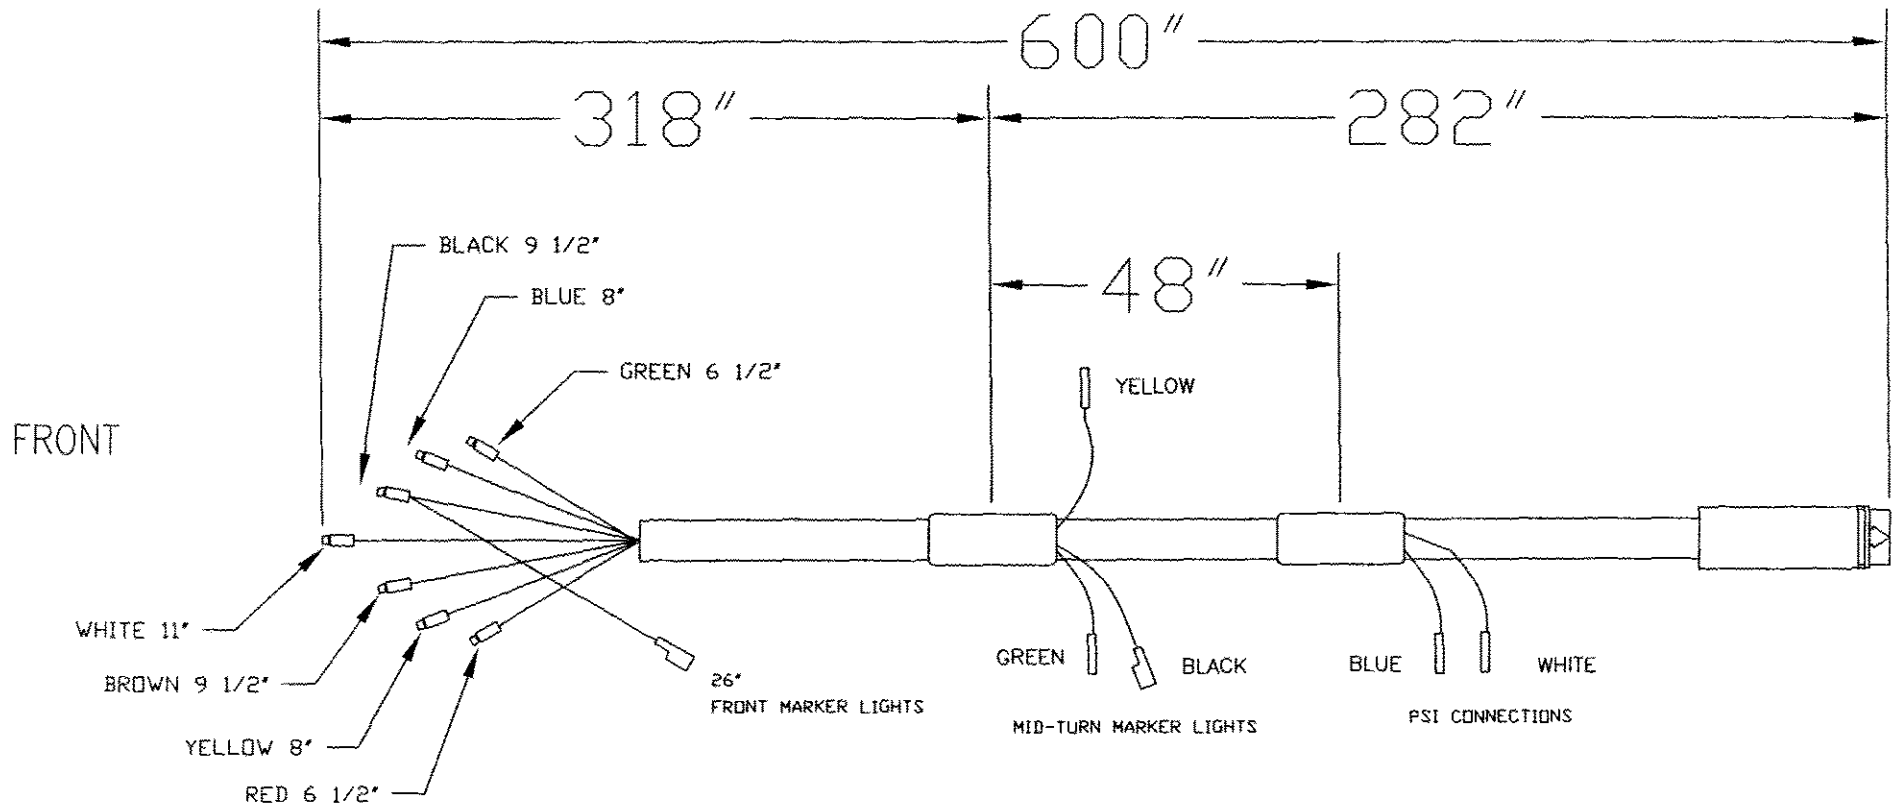



FORWARD WALL LIGHT ASSEMBLY - 8000052

CTS SEMI TRAILERS

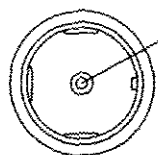

8000053 (2)
CLOSED BACK
GROMMET

8000028 (2)
YELLOW LED
MARKER LIGHT

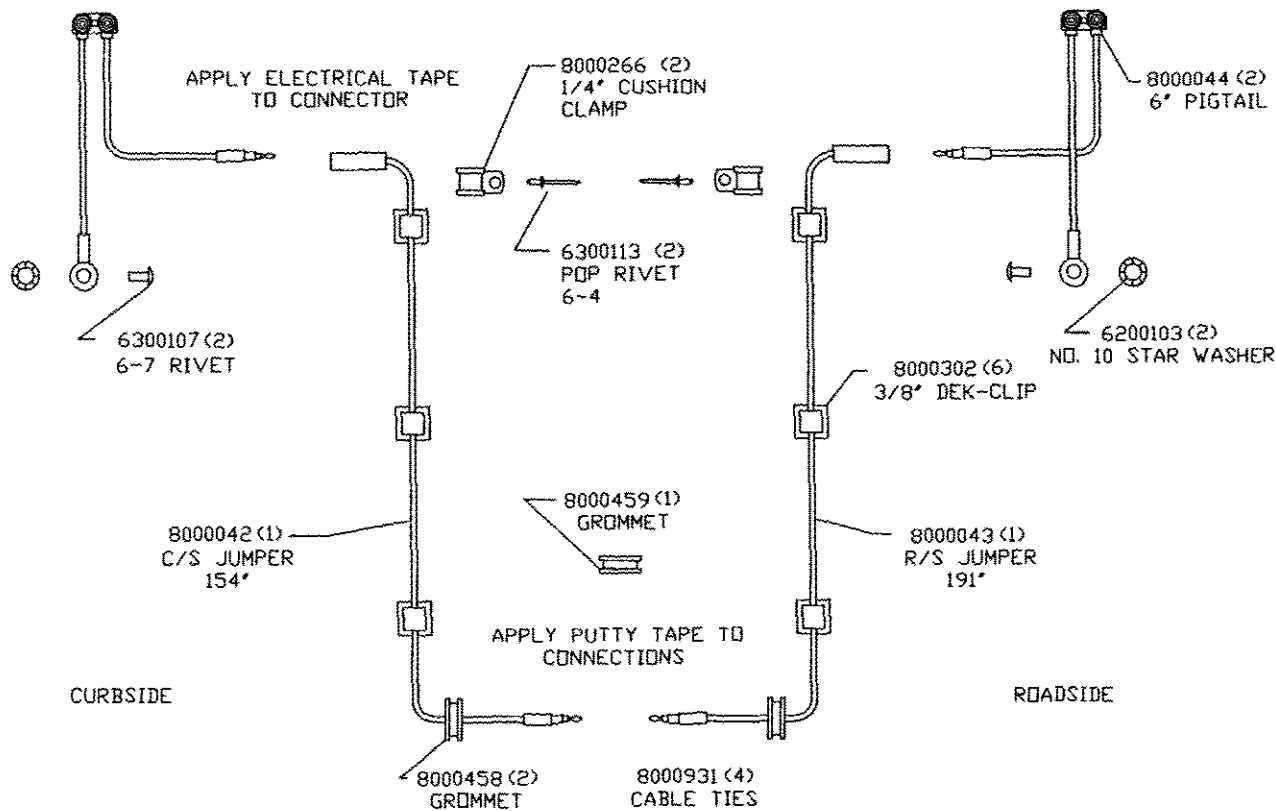


SMOOTH SKIN FORWARD WALL ELECTRICAL

FASTENER ASSEMBLY 800N070

MID-TURN LIGHT ASSEMBLY CTS SEMI TRAILERS

MID-TURN LIGHT ASSEMBLY
800N126


FASTENERS MID-TURN LIGHT
800N806




8000086 (2)
MID-TURN LIGHT
GROTE 01-5232-33



8000054 (2)
GROMMET, LIGHT
GROTE 92420-3




8000064 (2)
BRACKET, LIGHT
GROTE 43362-3



3201005 (4)
STRAP, LIGHT MOUNTING
RSI PART






6300107 (2)
6-7 HARD RIVET

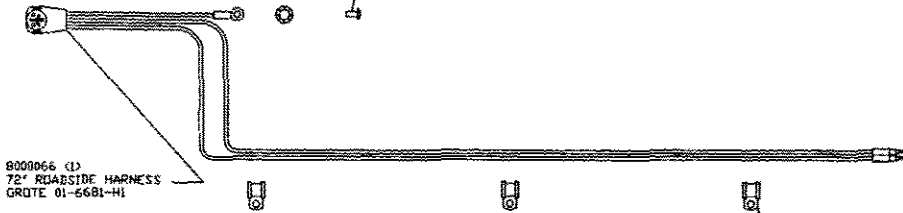

8000066 (1)
72" ROADSIDE HARNESS
GROTE 01-6681-H1




8000266 (5)
1/4" CUSHION CLAMP



6100377 (4)
LOCKNUT, 3/8"-16
6200376 (8)
FLAT WASHER 3/8"
6000376 (4)
BOLT, 3/8"-16 x 1"



6200183 (2)
STAR WASHER

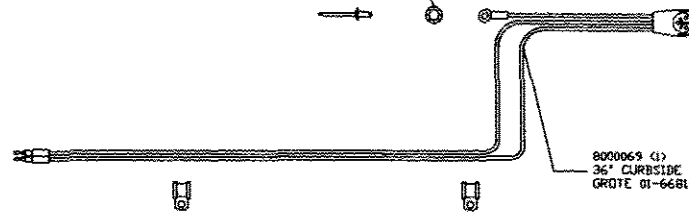


8000069 (1)
36" CURBSIDE HARNESS
GROTE 01-6681-H8



6300126 (7)
POP RIVET 6-6
STAINLESS

REAR SILL HARNESS & FASTENERS 8000008 CTS SEMI TRAILERS

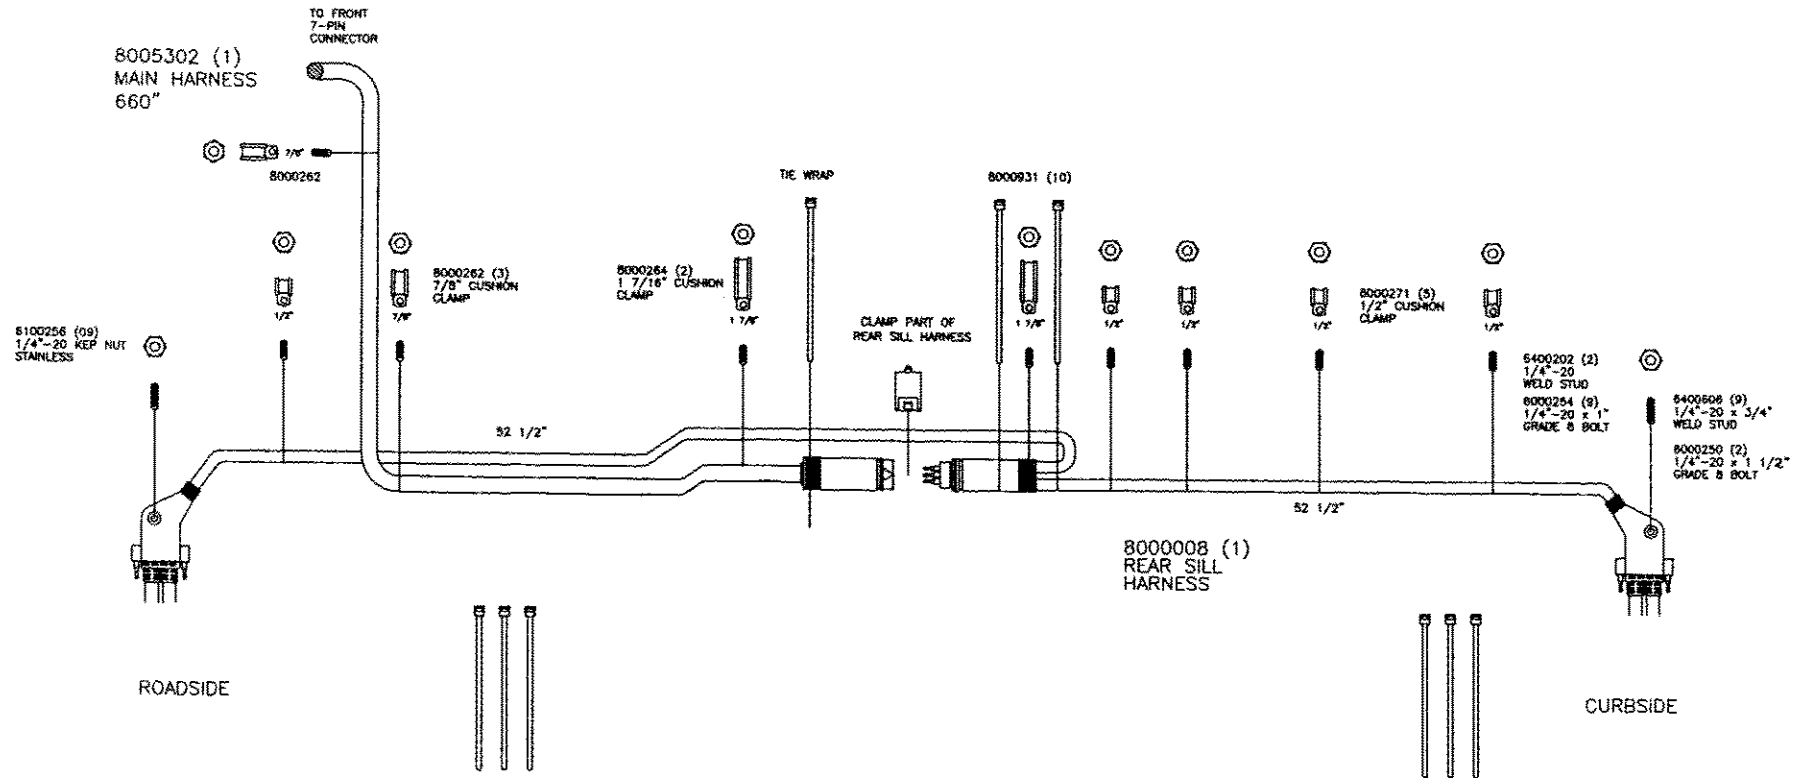

TAIL LIGHT ASSEMBLY 800N917
CTS SEMI TRAILERS

GROUND





TAIL

STOP / TURN


8000900 (4)
TAIL LIGHT - LED
GROTE 53302

6300126 (2)
POP RIVET 6-6

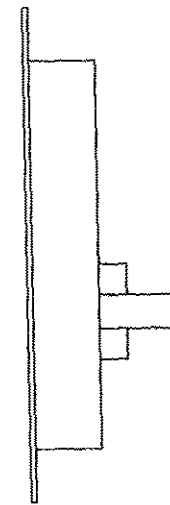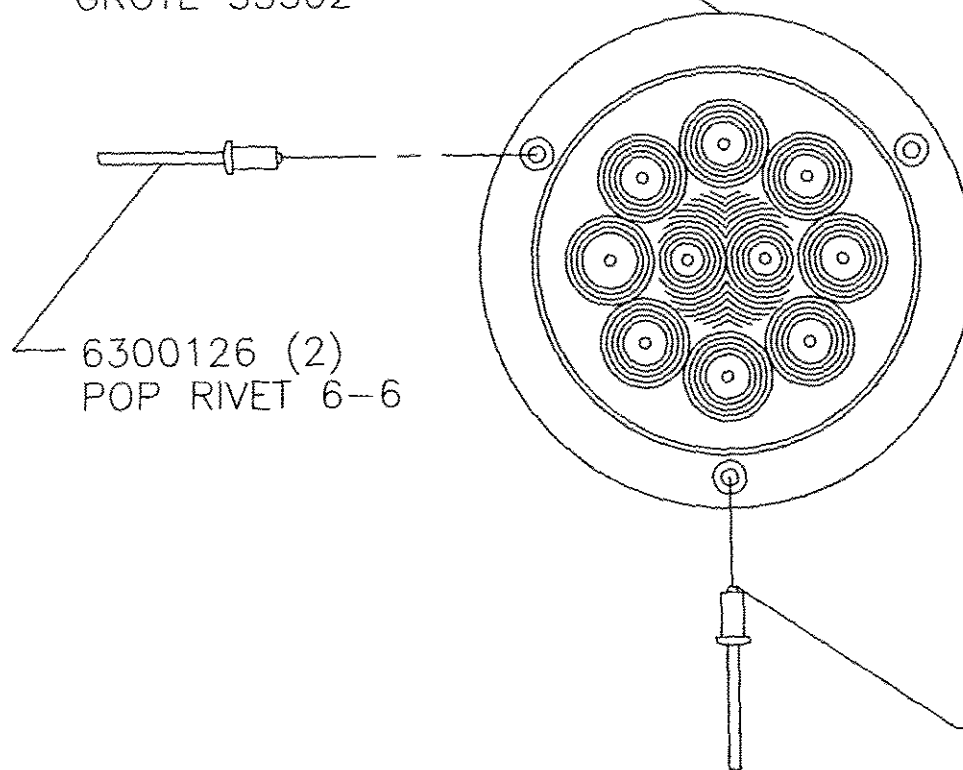


6300153 (1)
POP RIVET 6-4
SECURITY

REAR SIDE LIGHT ASSEMBLY 800N125
CTS SEMI TRAILERS


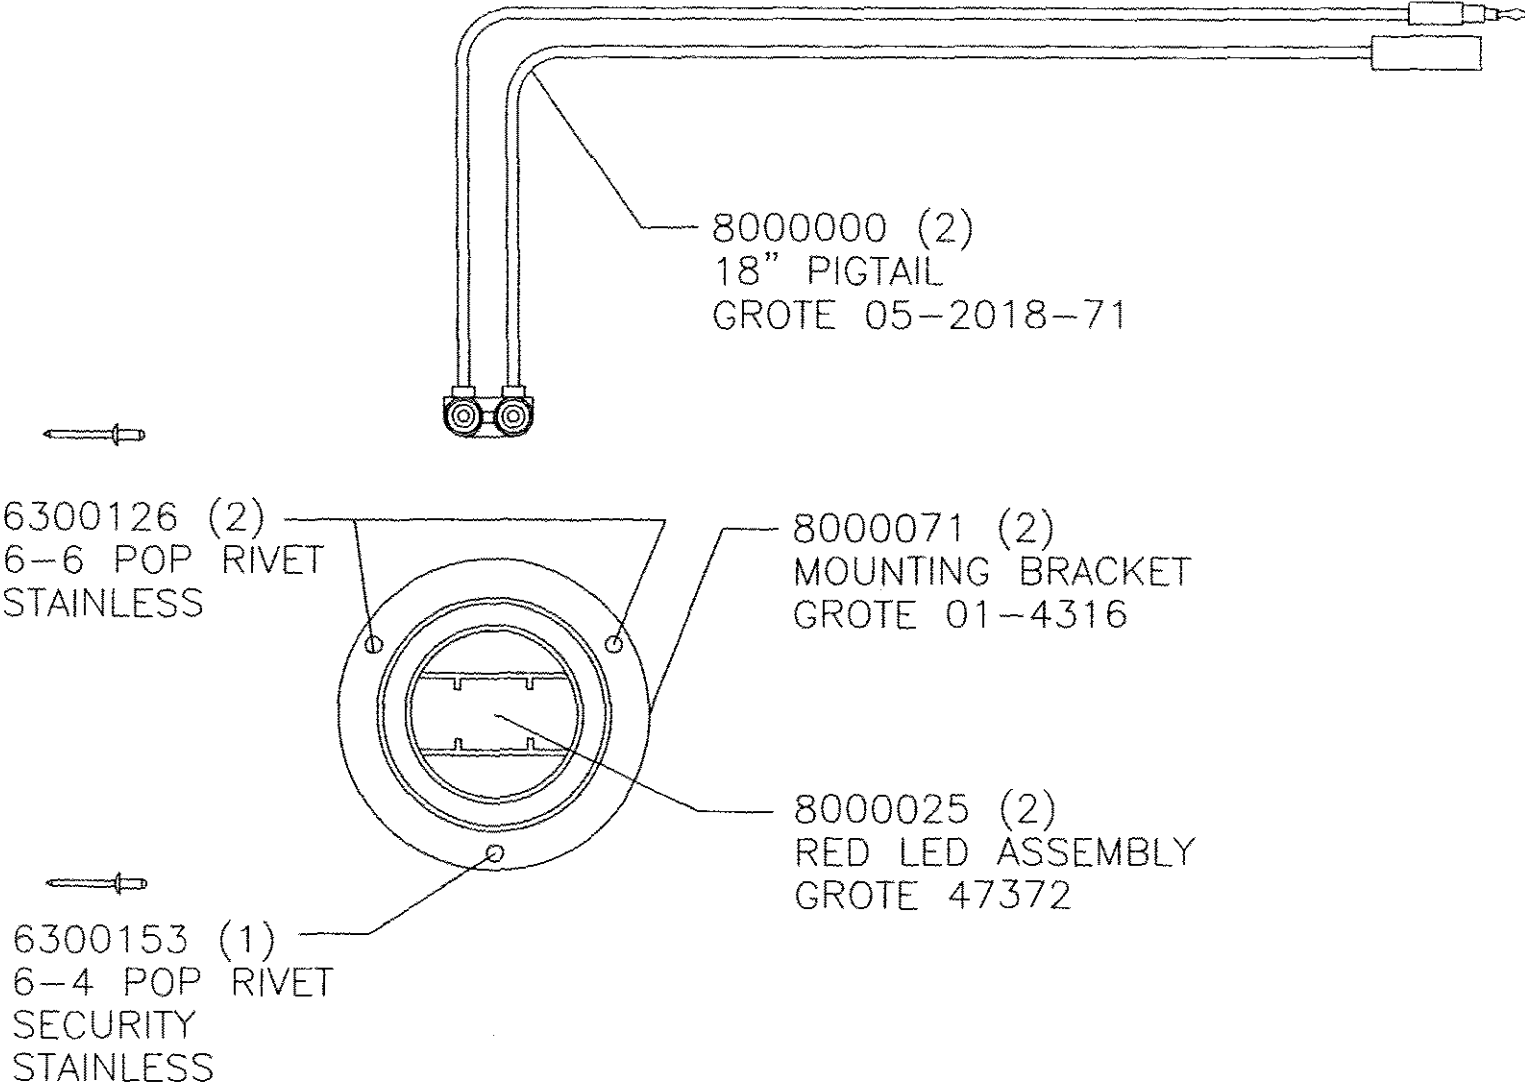


LICENSE LIGHT ASSEMBLY - 800N918

CTS SEMI TRAILERS



TRUCK-LITE LICENSE LIGHT - INCANDESCENT



6300139 (2)
POP RIVET 6-16

8005429 (1)
LICENSE LIGHT
TRUCK-LITE 21204C



6400606 (1)
1/4"-20 x 3/4"
WELD STUD




8000266 (1)
1/4" CUSHION
CLAMP

1/4"



6100256 (1)
1/4"-20 KEP NUT
STAINLESS




8000466 (1)
GROMMET
3/8 x 3/8




8005430 (1)
HOT WIRE
TRUCK-LITE 96932

60"




8005464 (1)
JUMPER - 60"
TRUCK-LITE 95944

ABS LIGHT ASSEMBLY 800N137
CTS SEMI TRAILERS

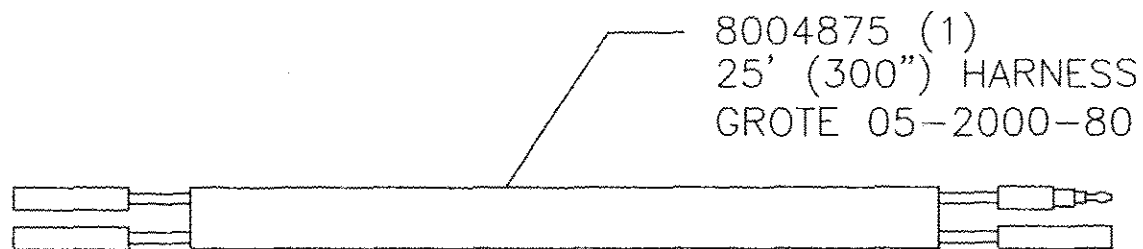


8004875 (1)
25' (300") HARNESS
GROTE 05-2000-80

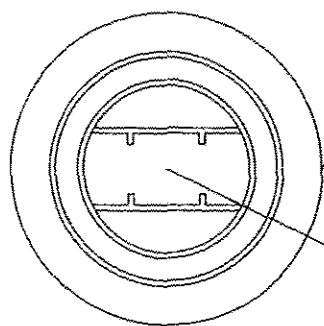


8000095 (1)
MOUNTING GROMMET
GROTE 92120

8000094 (1)
2" ABS LIGHT
GROTE 78333

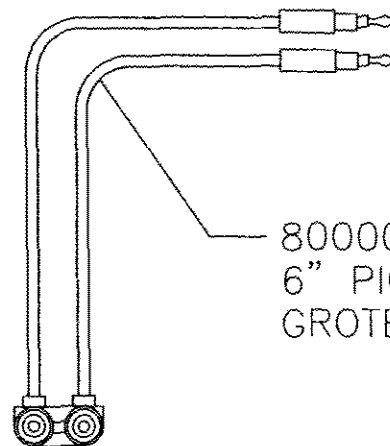


8000047 (1)
6" PIGTAIL
GROTE 66851

DOOR HEADER ICC LIGHT ASSEMBLY 800N107 CTS SEMI TRAILERS

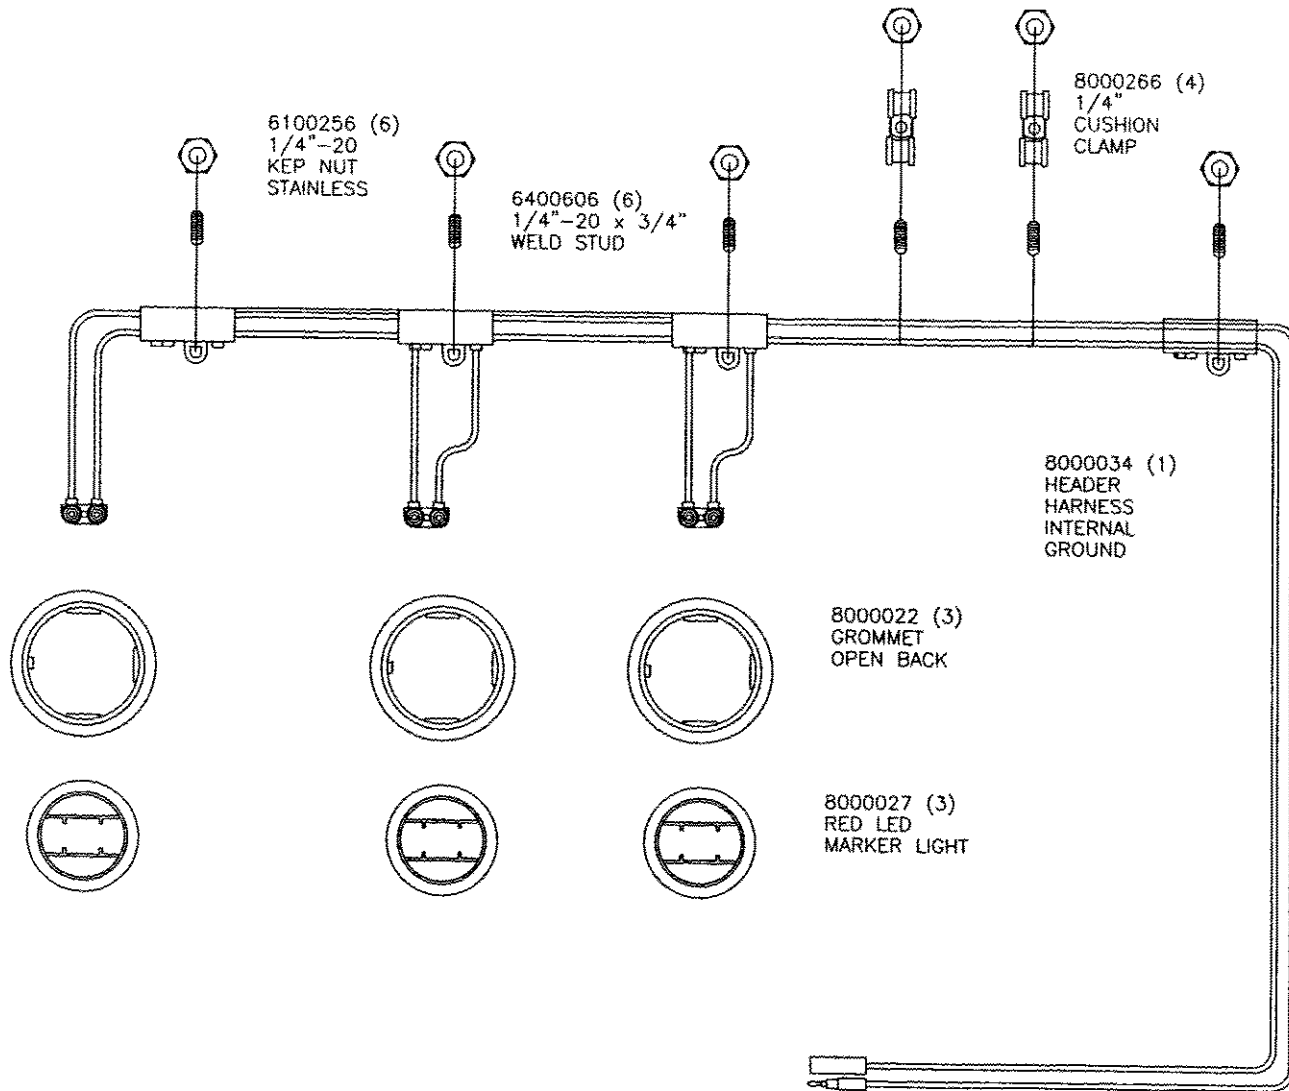


FLOOR ASSEMBLY CONWAY 48' CITY SEMI

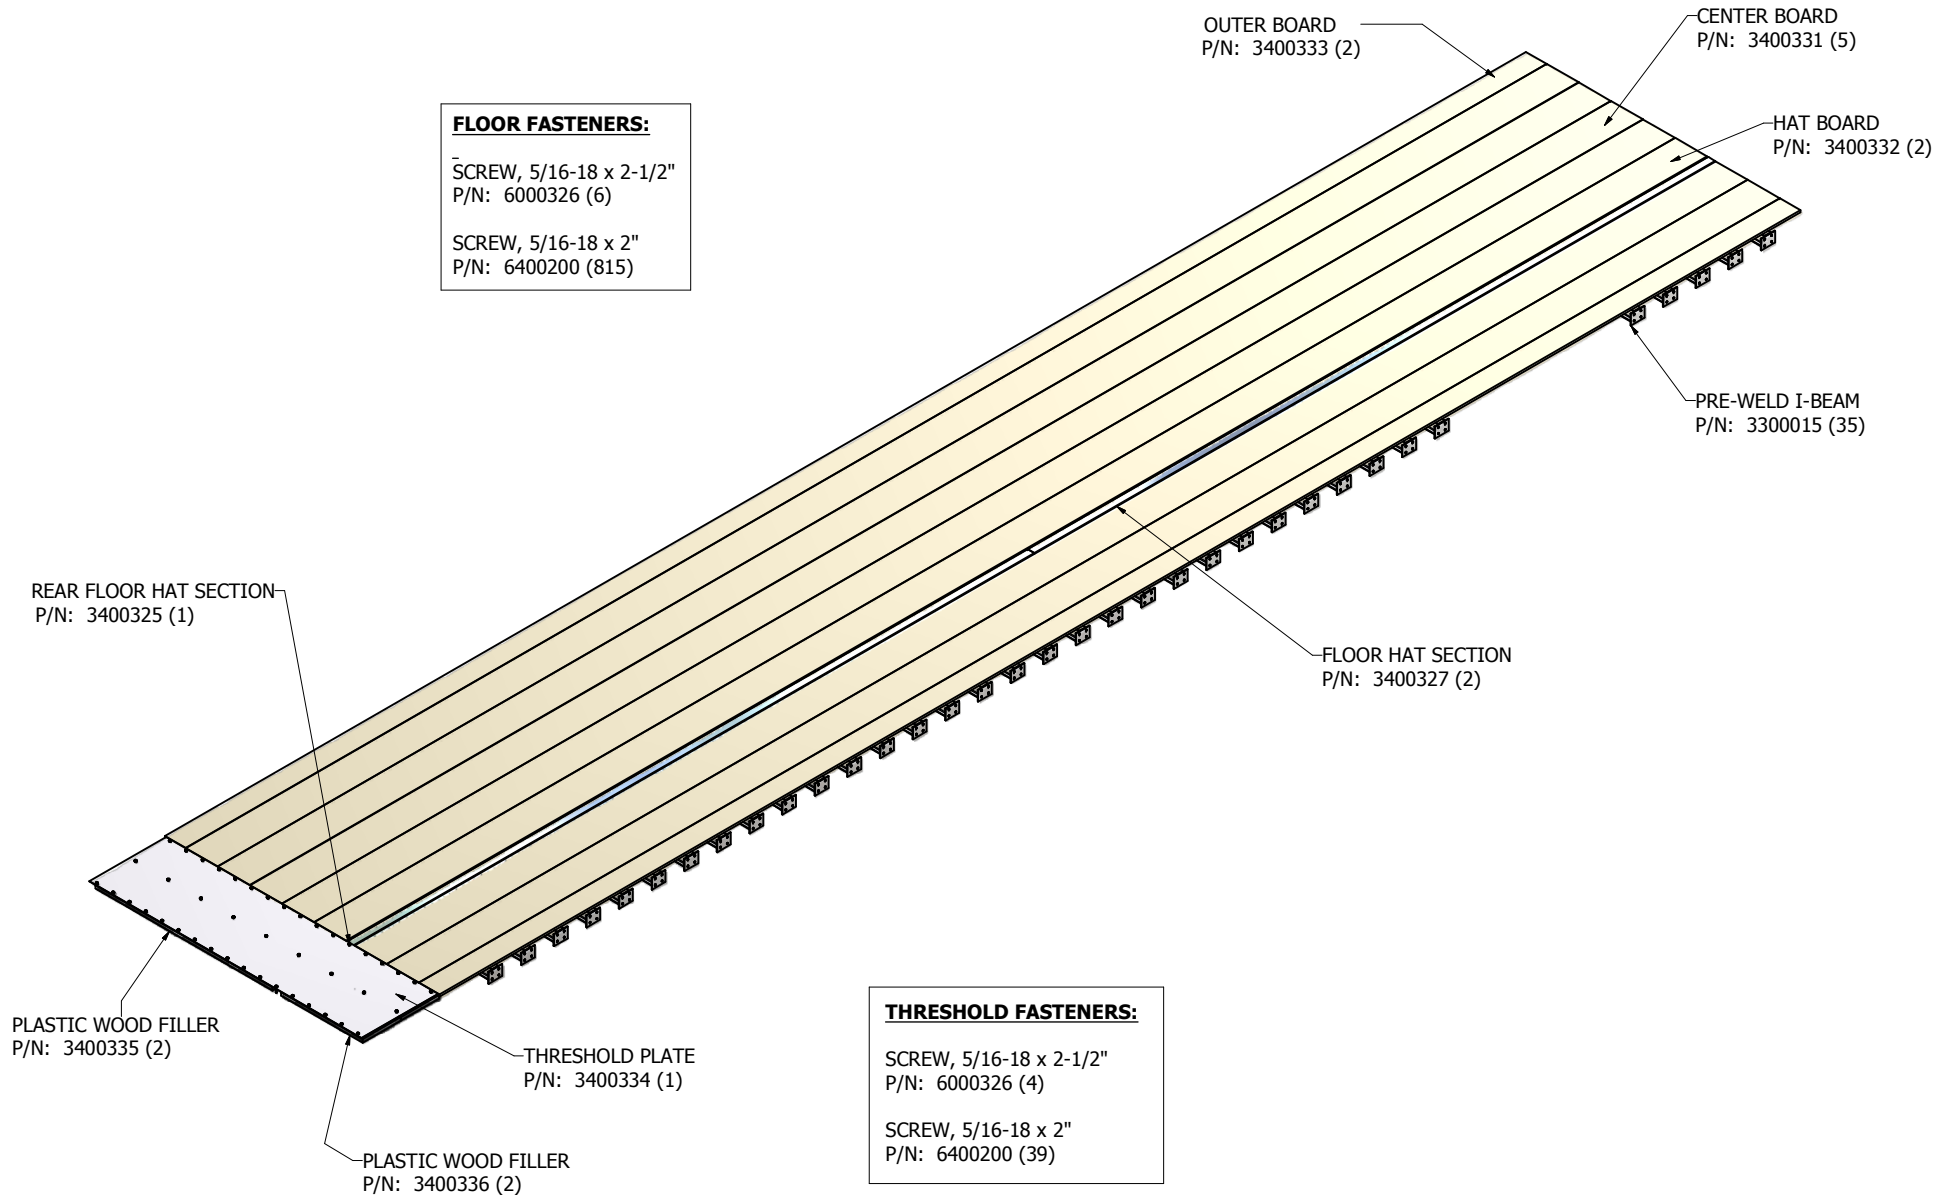



FOWARD WALL ASSEMBLY (410M286)

CONWAY 48' CITY SEMI

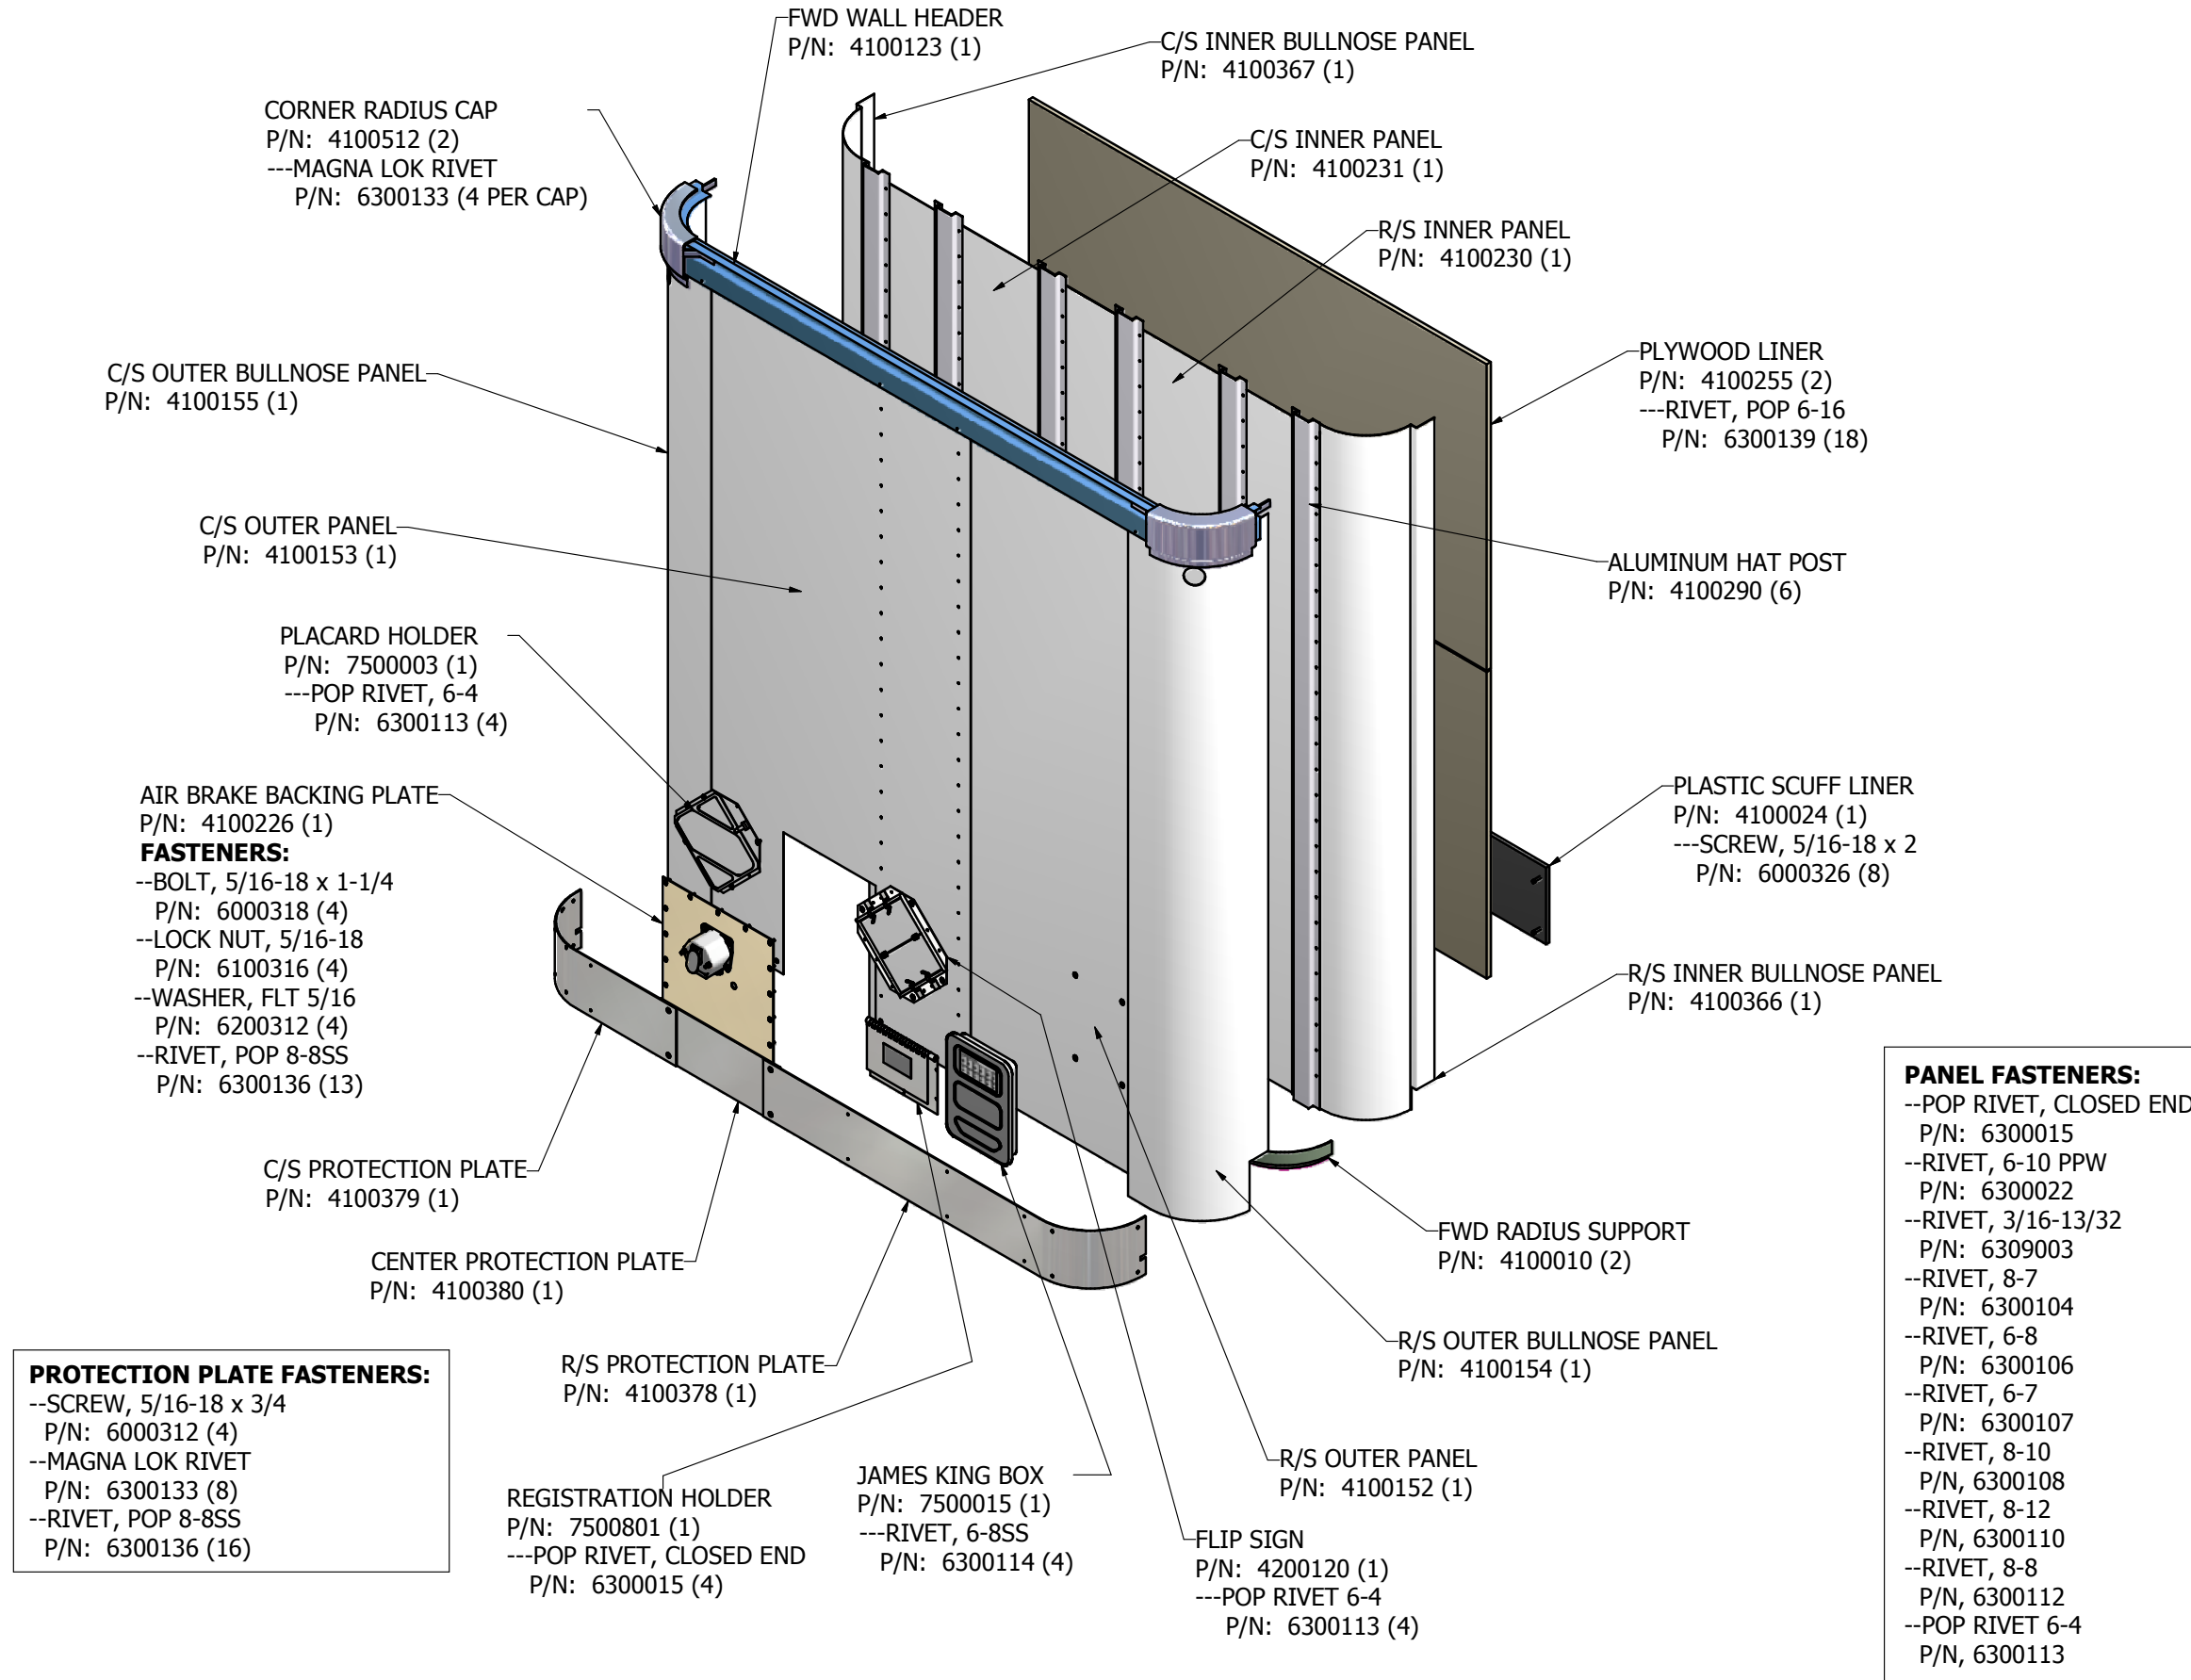

UPPER COUPLER ASSEMBLY


310M008 – COMPLETE ASSEMBLY

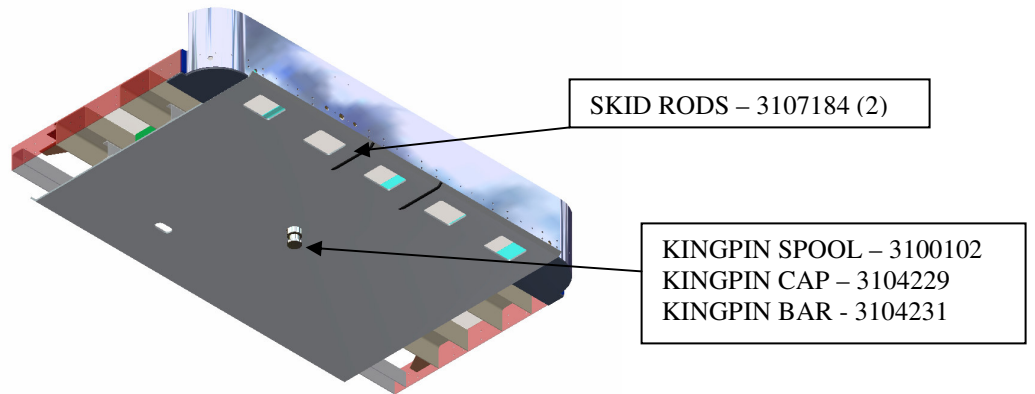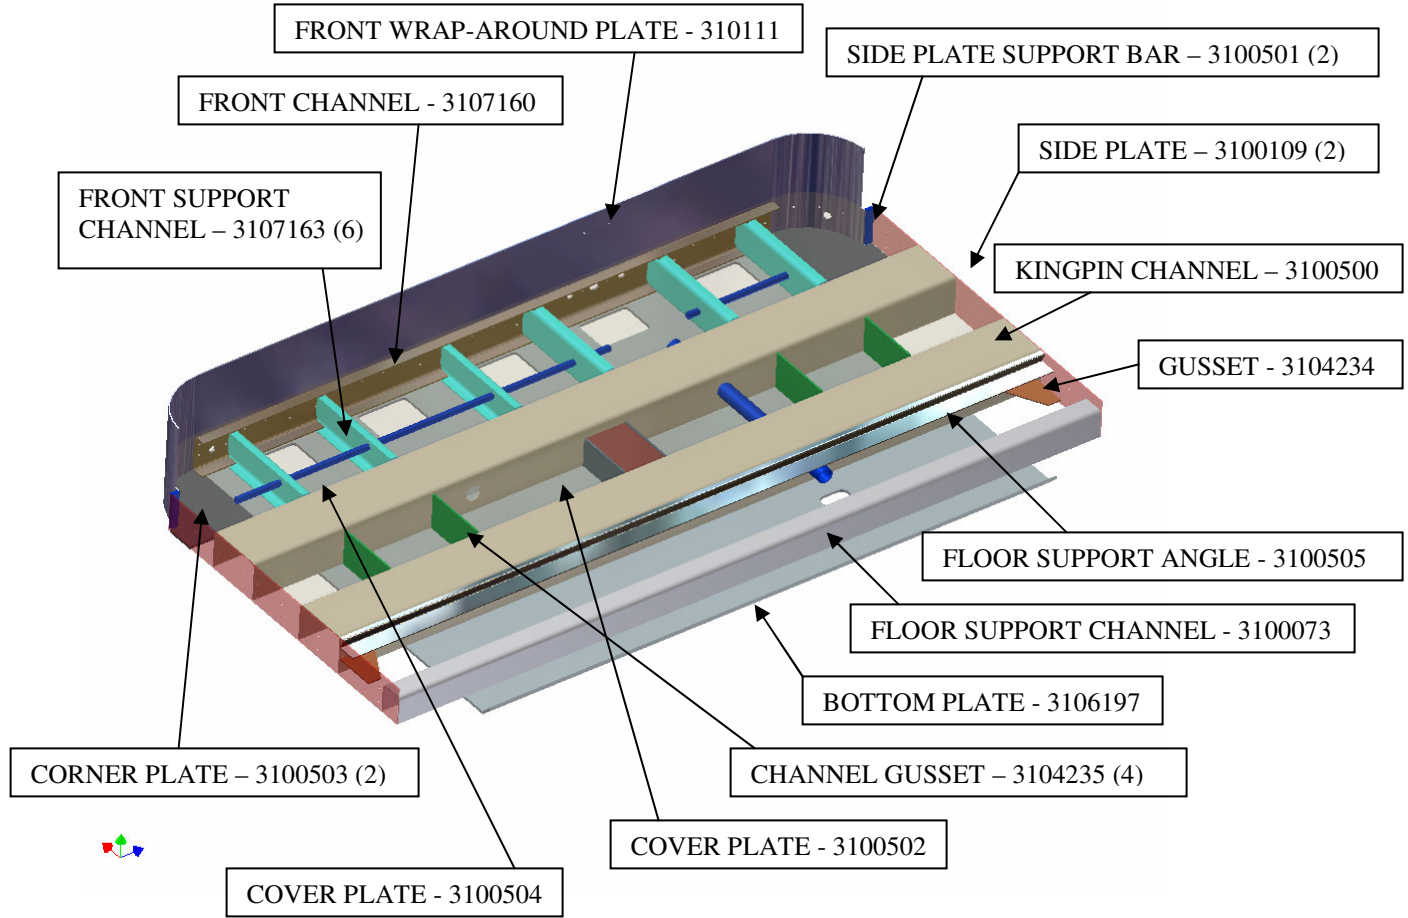

LANDING LEG ASSEMBLY


CONWAY CITY SEMI TRAILERS

COMPLETE LANDING LEG ASSEMBLY
P/N: 350M009

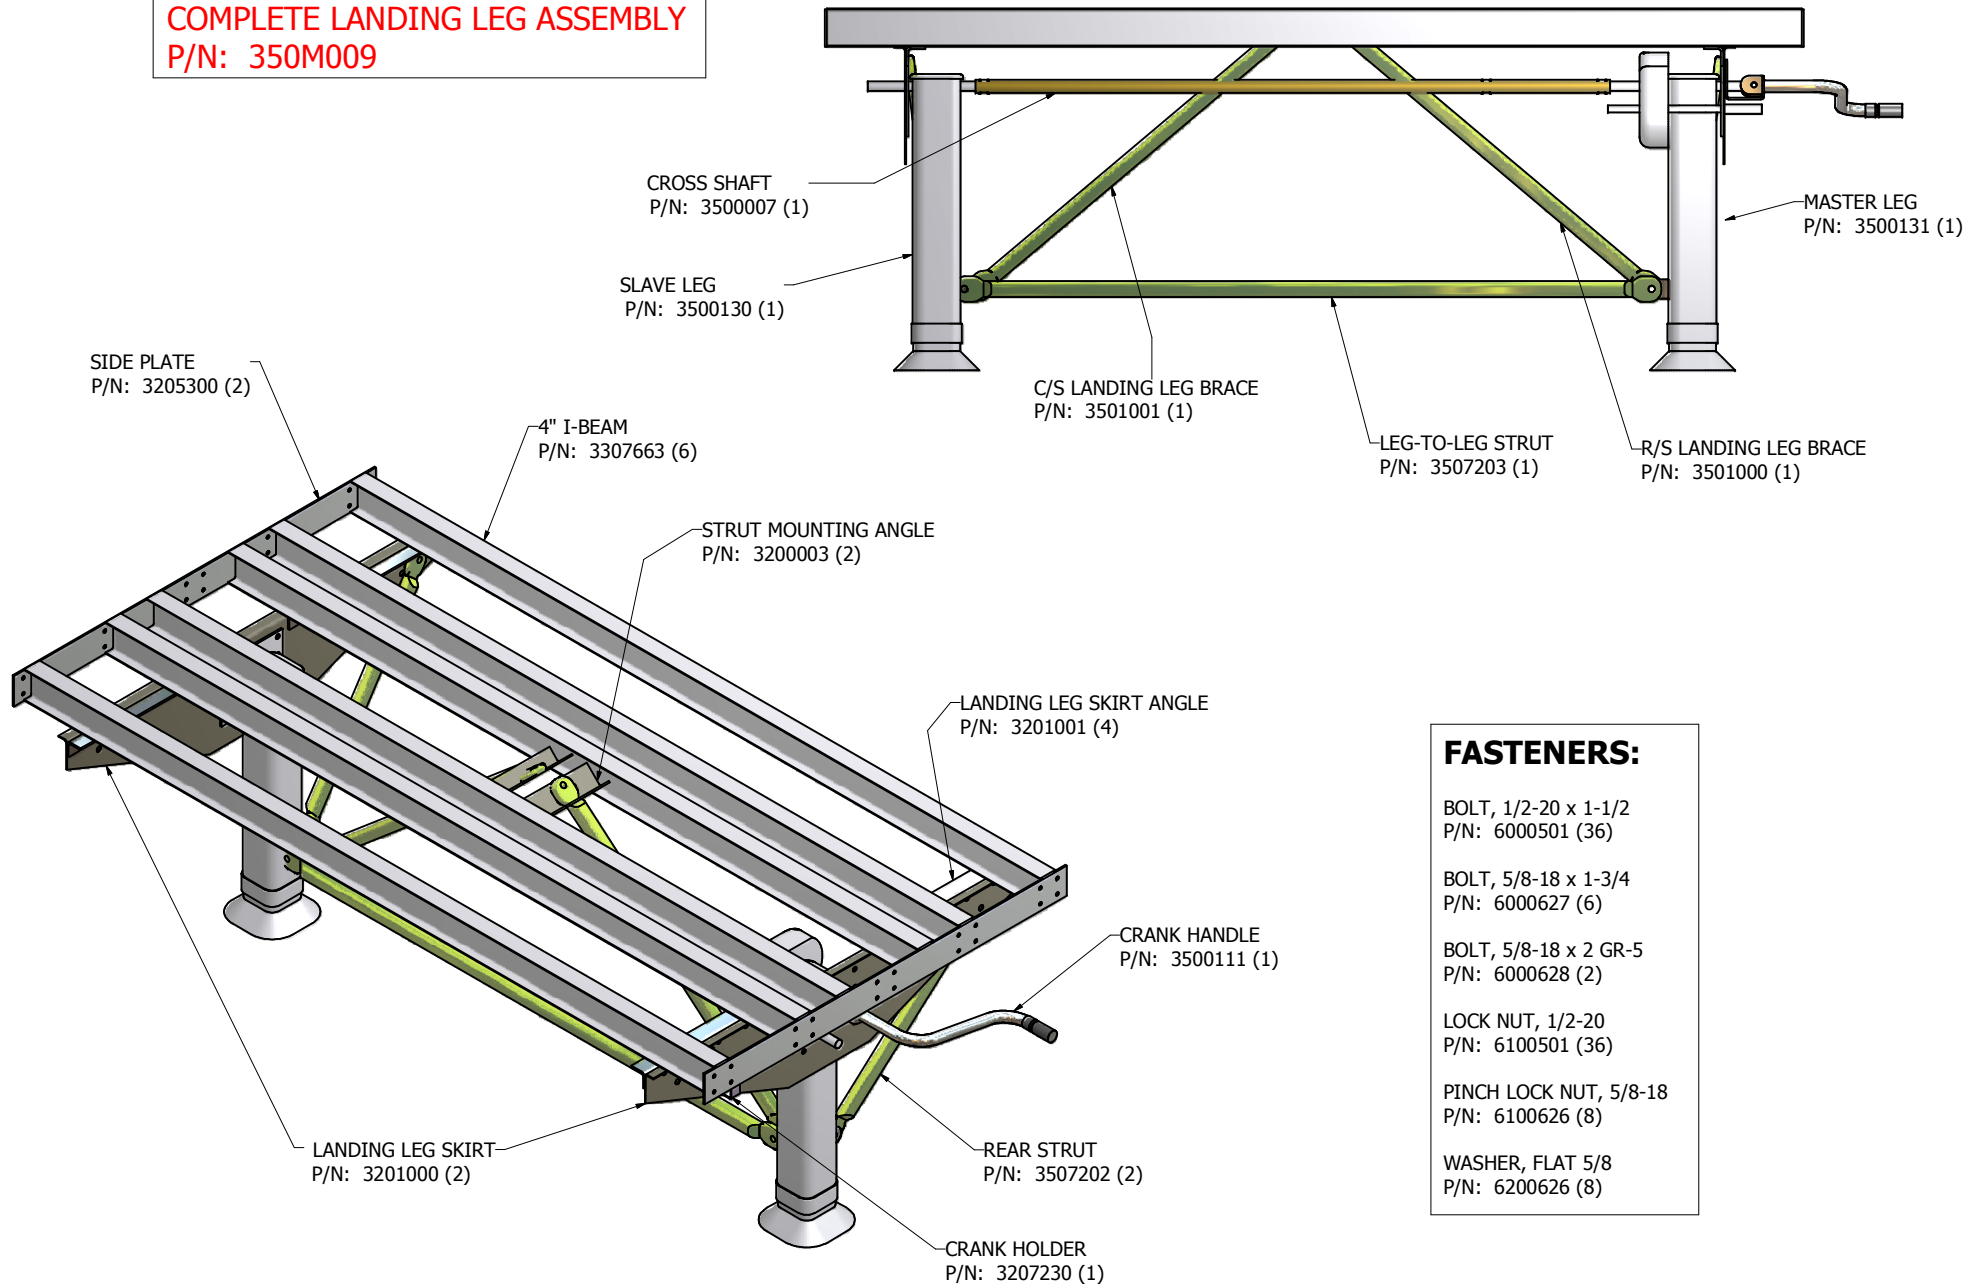

- FASTENERS:**
- BOLT, 1/2-20 x 1-1/2
P/N: 6000501 (36)
 - BOLT, 5/8-18 x 1-3/4
P/N: 6000627 (6)
 - BOLT, 5/8-18 x 2 GR-5
P/N: 6000628 (2)
 - LOCK NUT, 1/2-20
P/N: 6100501 (36)
 - PINCH LOCK NUT, 5/8-18
P/N: 6100626 (8)
 - WASHER, FLAT 5/8
P/N: 6200626 (8)


MUDFLAP COMPONENTS FOR SEMI'S

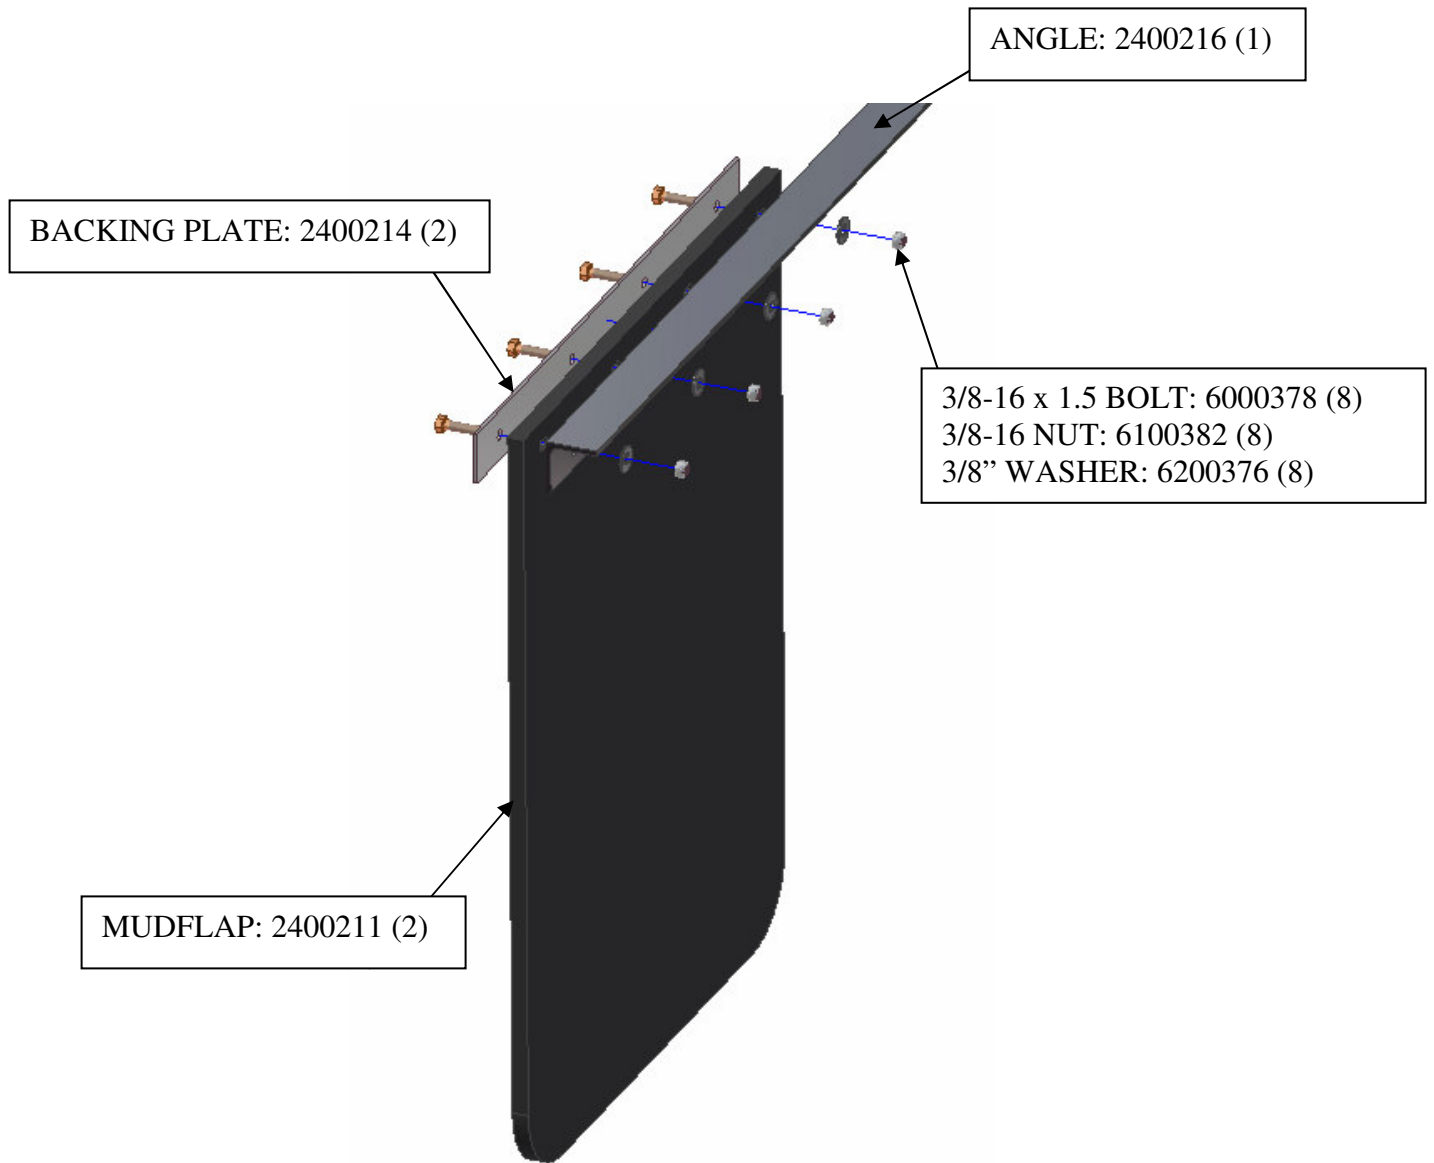


ALUMINUM ROOF COMPONENTS

REAR/SIDE FLASHING
P/N: 4400209 (2)
LOCATED ON FRONT & SIDES


GALV. ROOF BOWS
P/N: 4400310 (26)
SPACED ON 24" CENTERS

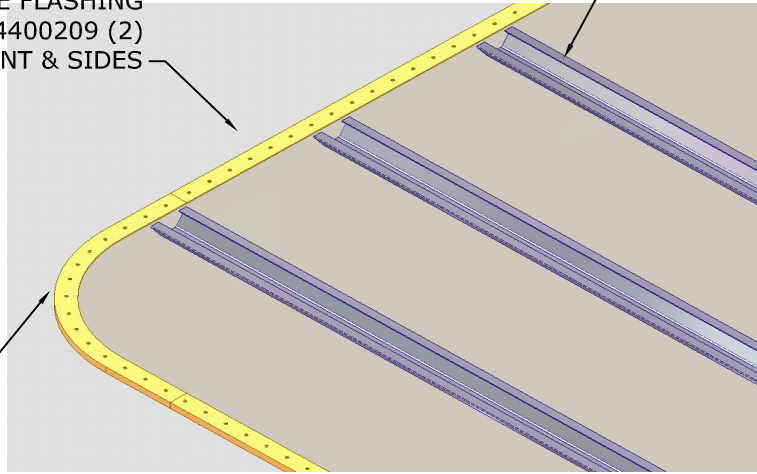

CORNER FLASHING
P/N: 4400212 (2)
LOCATED ON
FRONT RADIUS CORNERS

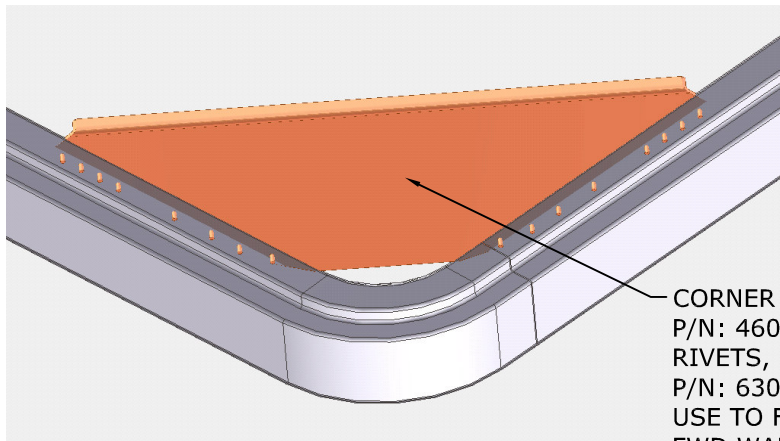

CORNER ATTACHMENT PLATE
P/N: 4607205 (2)
RIVETS, 6-8
P/N: 6300106
USE TO FASTEN PLATE TO
FWD WALL HEADER / UPPER RAIL

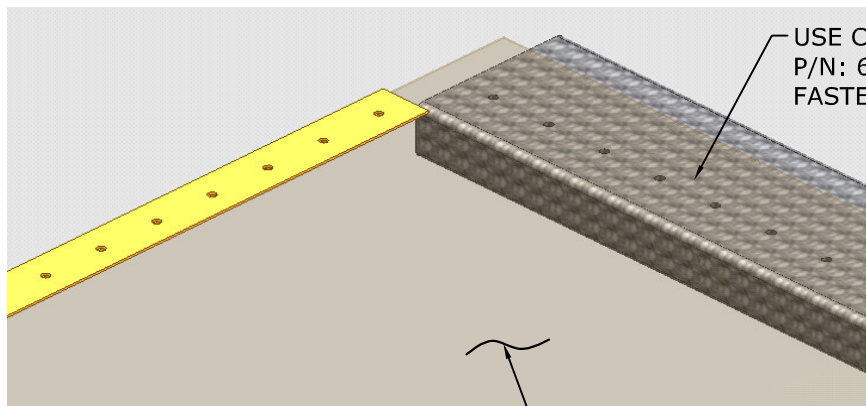


USE CLOSED END POP-RIVETS
P/N: 6300015
FASTEN TO REAR DOOR HEADER


RIVETS, 6-8
P/N: 6300105
USE TO FASTEN ROOF BOWS
TO UPPER RAIL / FWD WALLHEADER
AND FLASHING & COIL TO
UPPER RAIL / FWD WALL HEADER

ALUMINUM ROOF COIL,
040 x 012.625 (265 lbs)
P/N: 7800404

SIDEWALL LAYOUT CONWAY 48' CITY SEMI TRAILER (PLASTIC-LINED INTERIOR)

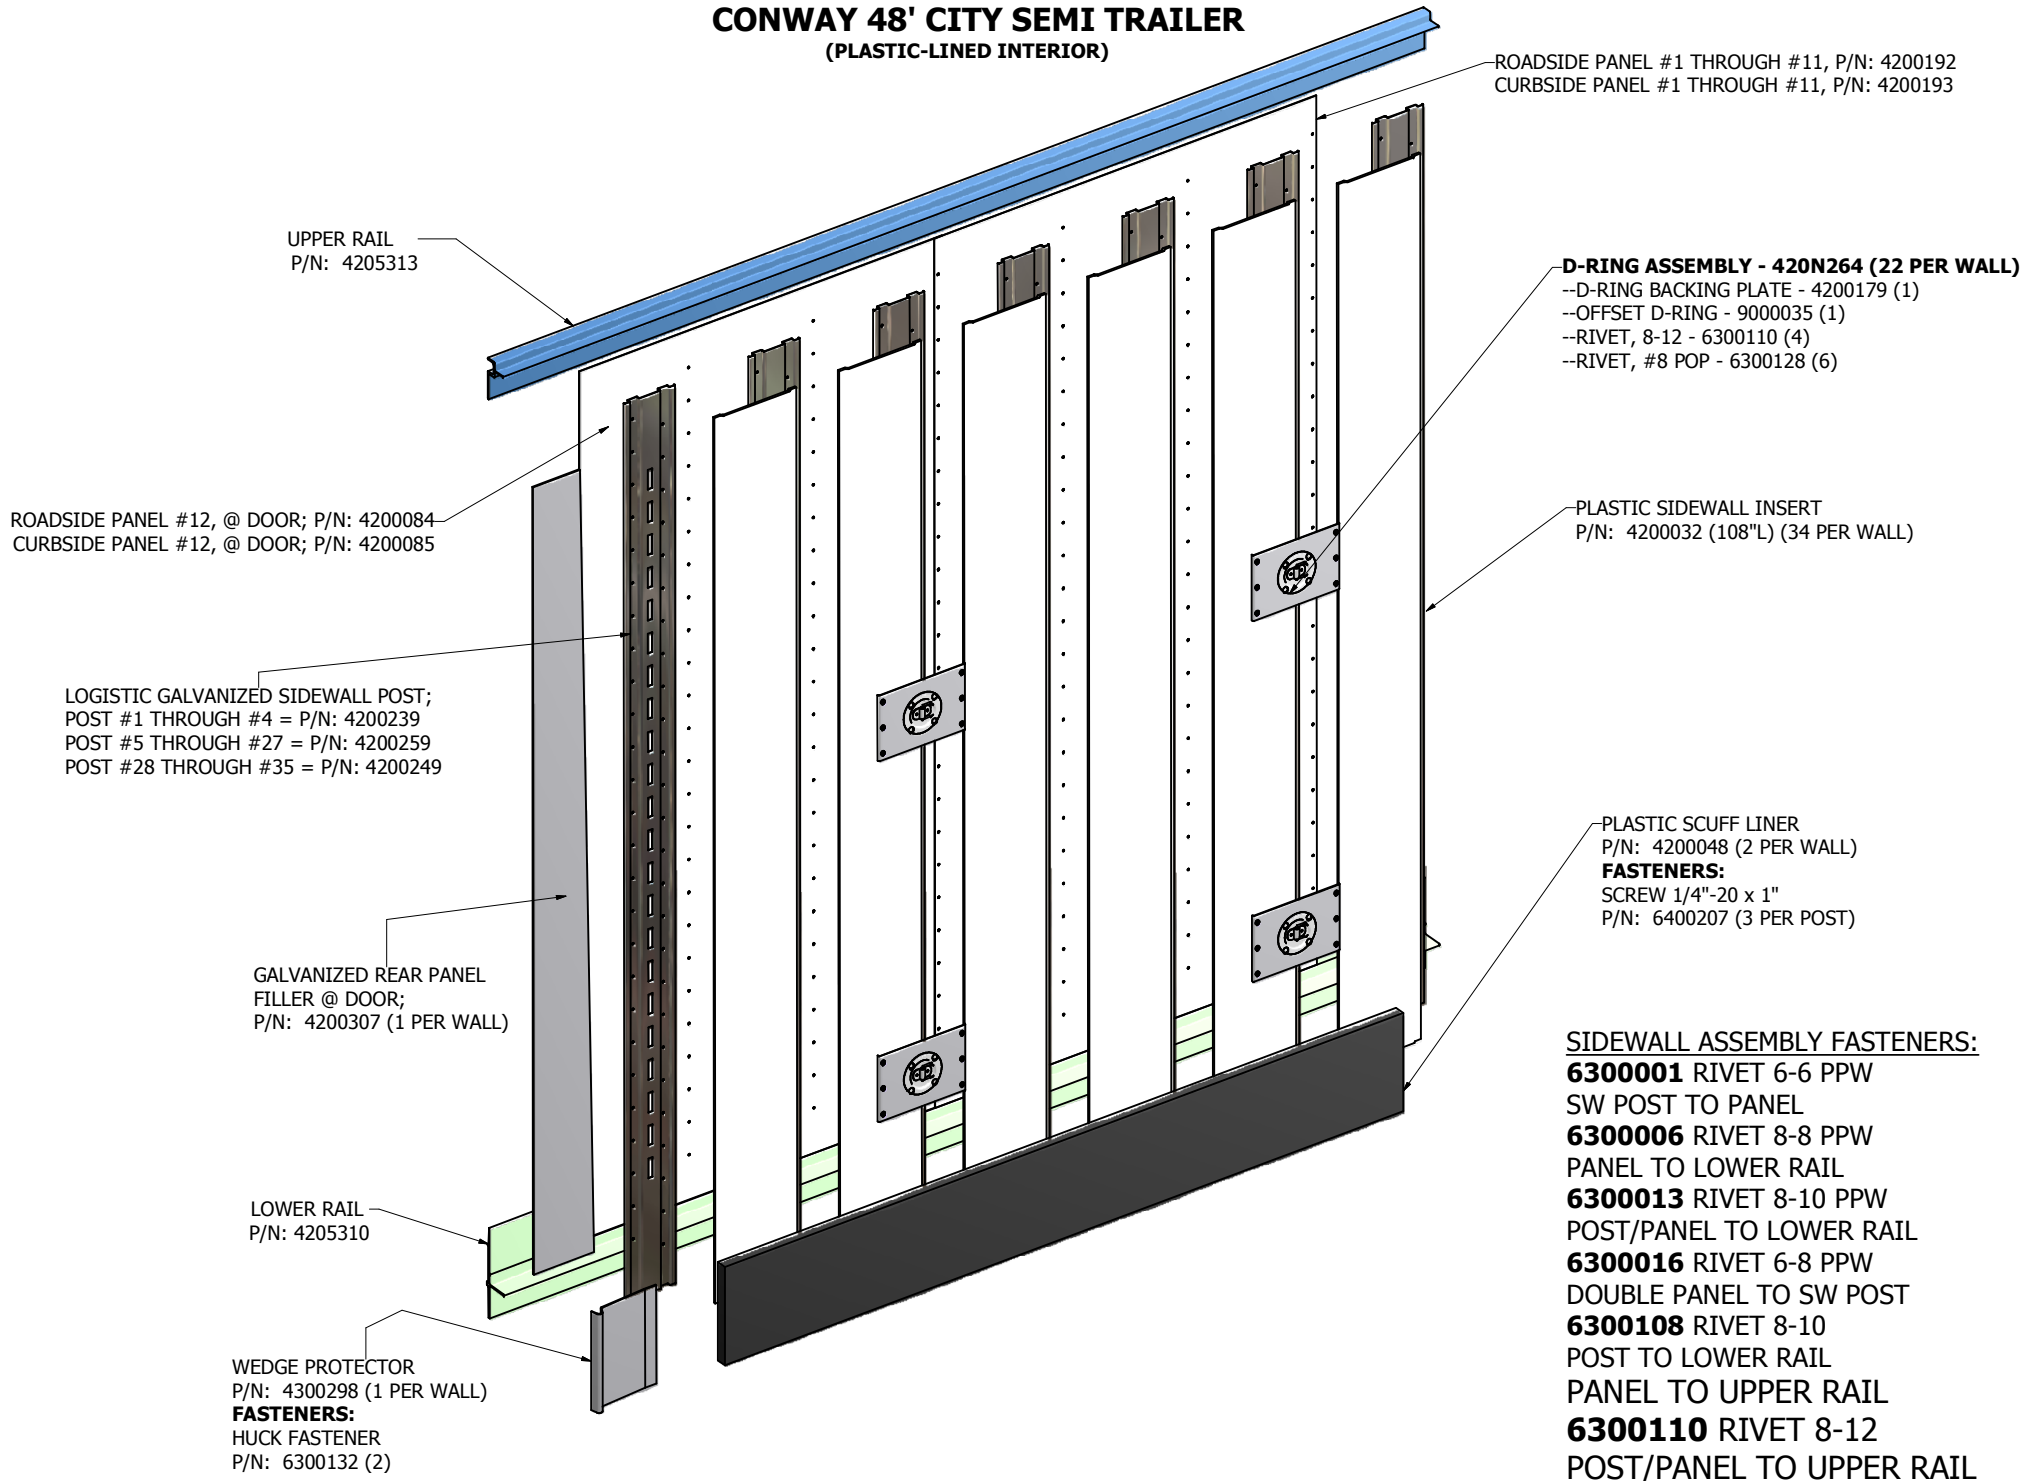


SLIDER FRAME ASSEMBLY – 210M000
CTS SEMI TRAILER – 2007

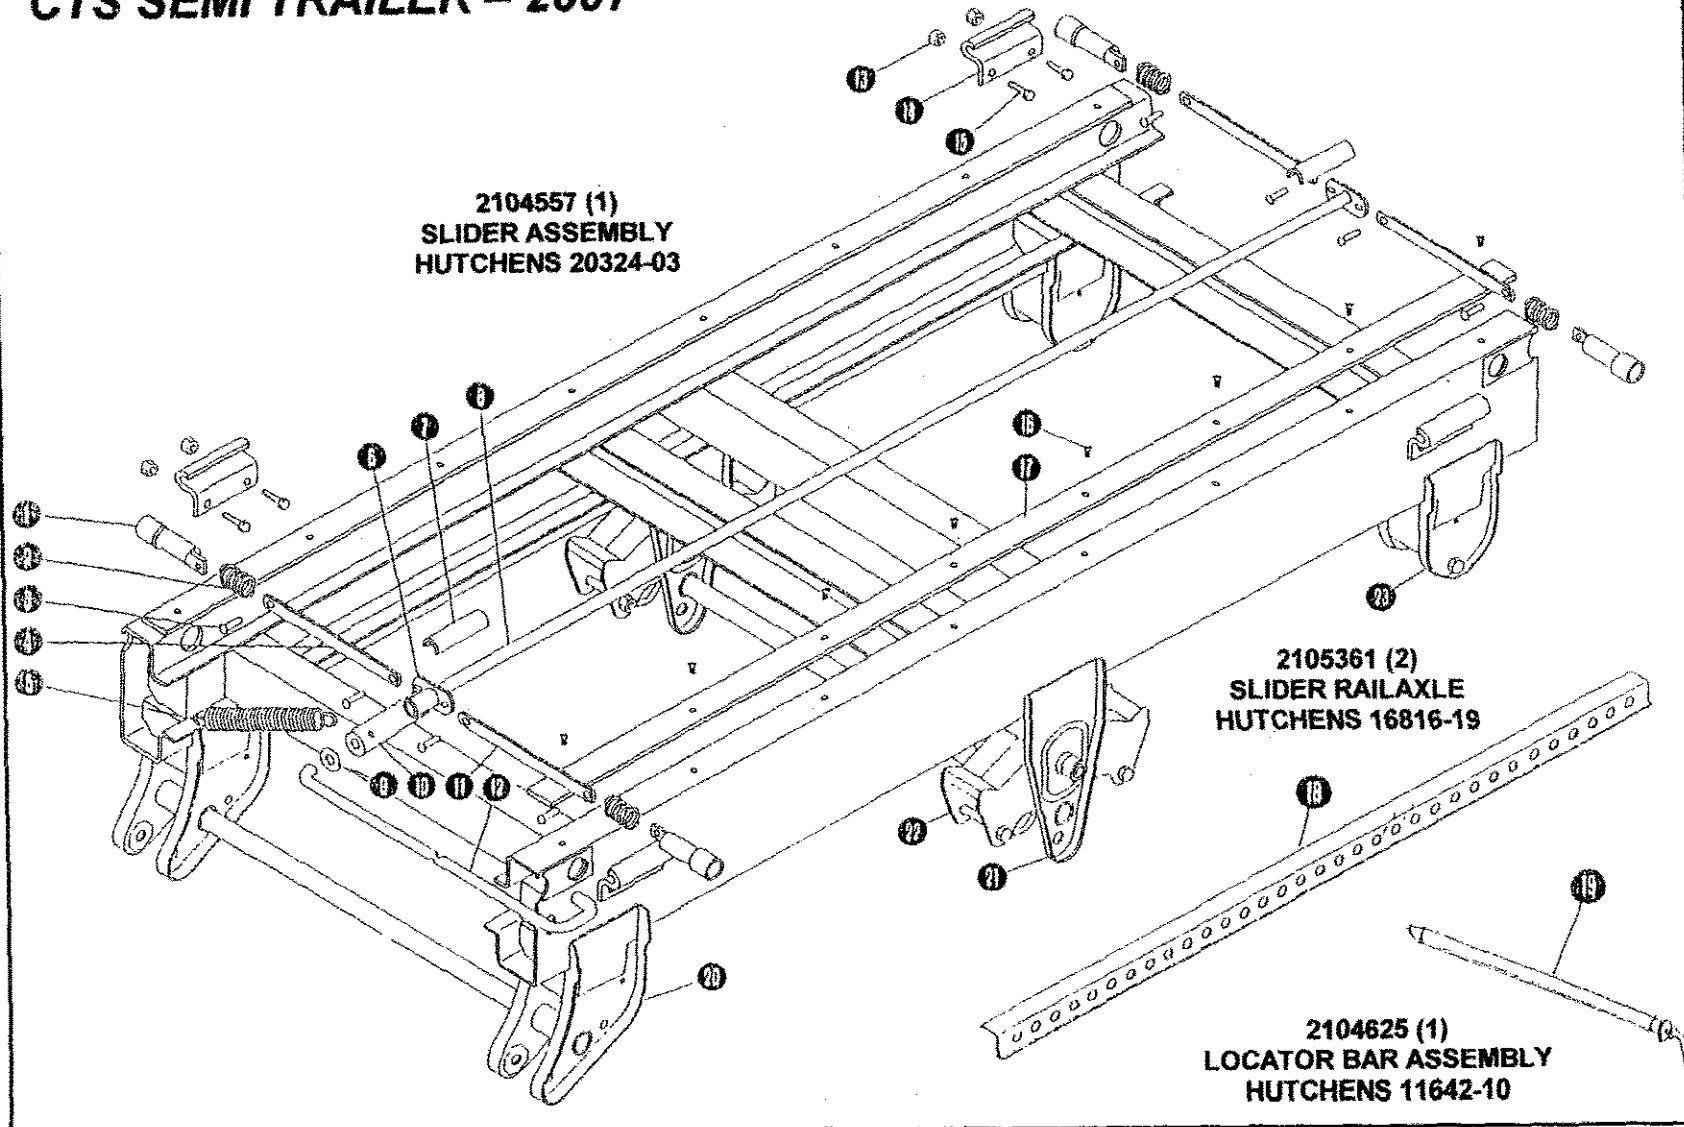


SUSPENSION ASSEMBLY – 210M000

CTS SEMI TRAILER – 2007

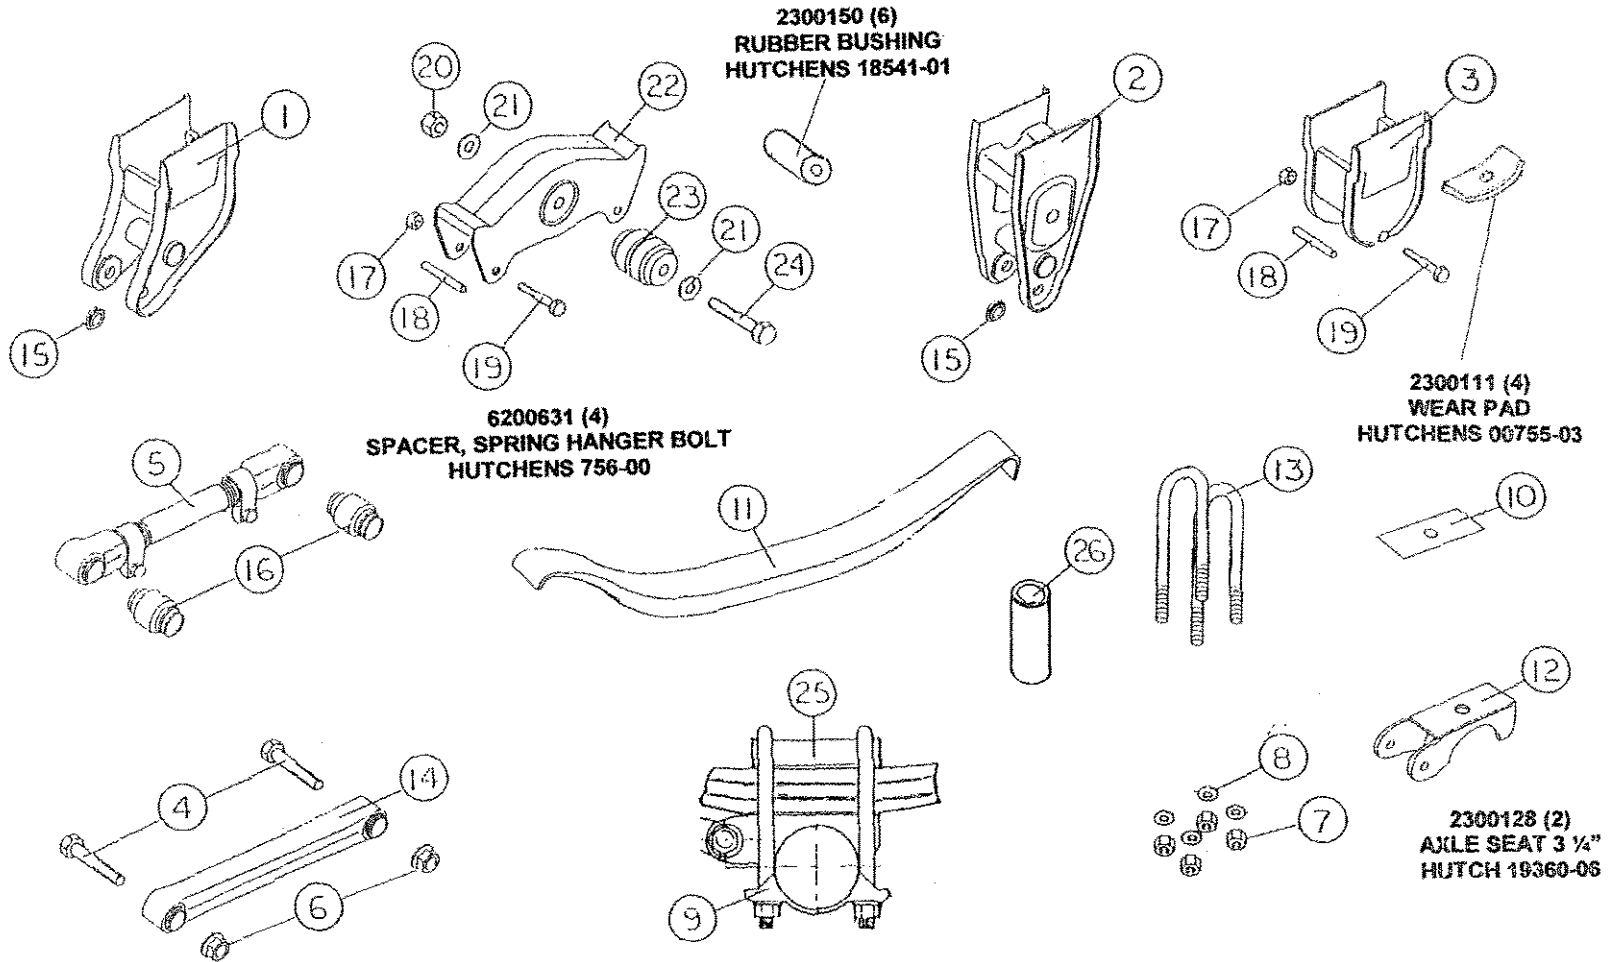


BOGIE FRAME ASSEMBLY – 210M480
CTS SEMI TRAILER – 2007

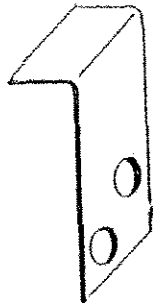


2104528 (1)
ANGLE, SLIDER HOSE MOUNT

2201657 (2)
GUSSET, AIR TANK

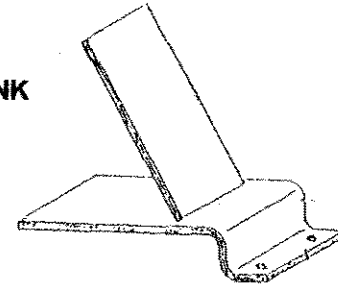

2204501 (2)
BRACKET, AIR TANK MOUNT

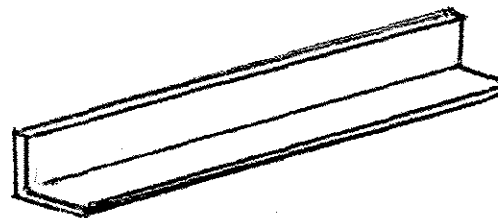


2104555 (1)
ANGLE, AIR PLATE MOUNT



2104608 (2)
SLIDER STOP PIPE – FIXED





21000027 (4)
GUSSET, RAIL SUPPORT

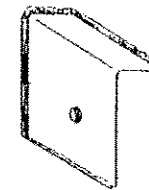

1007212 (1)
ANGLE, DRAIN CABLE

SLIDER HOSE HANGER ASSEMBLY – 210N048
CTS SEMI TRAILER

2104616 (1)
ROD, AIR HOSE SPRING



2104551 (2)
SPRING, CABLE & HOSE SUPPORT
PHILLIPS 17-116 (16")

4104552 (1)
HOSE HOLDER
PHILLIPS 17-157

